



Instruction Manual

Model: GBB106IP
Boombox with Dock for iPhone

Introduction

Thank you for buying this Grundig product, which is designed to give you many years of trouble-free service.

You may already be familiar with using a similar unit, but please take the time to read these instructions. They are designed to familiarise you with the unit's many features and to ensure you get the very best from your purchase.

Safety is important

Your safety and the safety of others is important.

Please therefore, ensure you read the “ Important Notes” **before you operate this unit.**

Warranty

In the unlikely event that your product fails to work normally, please call the below Grundig warranty number to discuss the problem with one of our qualified service engineers.

Australia.

Grundig Warranty: 1800 509 394

New Zealand

Grundig Warranty: 0800 450 259

CONTENTS

Introduction 2

What's in the box 3

Important Notes 4

Location of Controls 5

Control Definitions 6

Power 7

Setting the Time 8

Setting the Sleep Function 8

Connecting to Line In (Aux In) 8

Listening to FM Radio 9

Listening to iPod / iPhone 10

Trouble Shooting 11

Specification 11

Warranty 12

What's in the box

The following should be located within the packaging.

1 x AC/DC power adapter

User's Manual

Boombox with Dock for iPhone

Please retain all packaging materials for use in the event of the product needing transportation or in the unlikely event of the product requiring repair.

IMPORTANT NOTES

Ensure that you read all of the safety instructions before operating this unit.

Safety Considerations

Ensure that the power cable and other connected cables are protected and are positioned so that they are not likely to be walked on, pinched or damaged.

Do not position the unit in areas where it may experience humid or damp conditions.

Do not allow the unit to get wet. You must keep it away from dripping or splashing water.

Never allow children to insert foreign objects into the holes or slots on the unit.

Do not cover the ventilation holes with items such as tablecloths or curtains, etc. This may cause the unit to overheat.

No naked flame sources, such as candles, should be placed on or near the unit.

Do not place objects filled with liquids, such as vases or jugs, on or near the unit.

Do not place the unit in a closed cabinet without proper ventilation.

Cleaning

Disconnect the unit from the mains supply before cleaning.




Do not use any liquids or aerosol cleaners, as this may damage the unit. Use a dry, soft, dust free cloth.

Servicing

There are no user serviceable parts in this unit. When servicing, refer to qualified service technician.

Consult your retailer if you are ever in doubt about the installation/operation /safety of the product.

Location of Controls

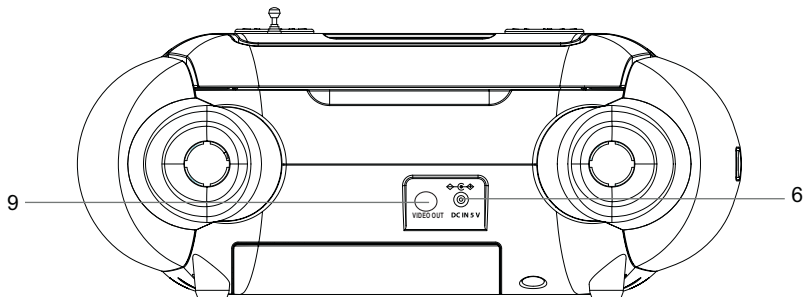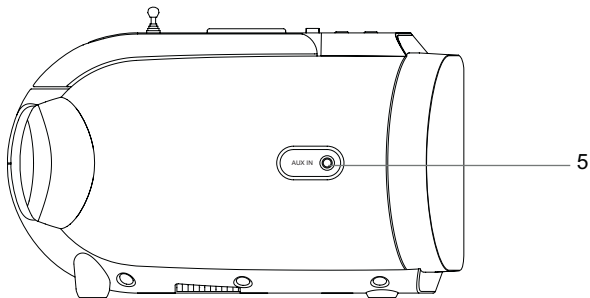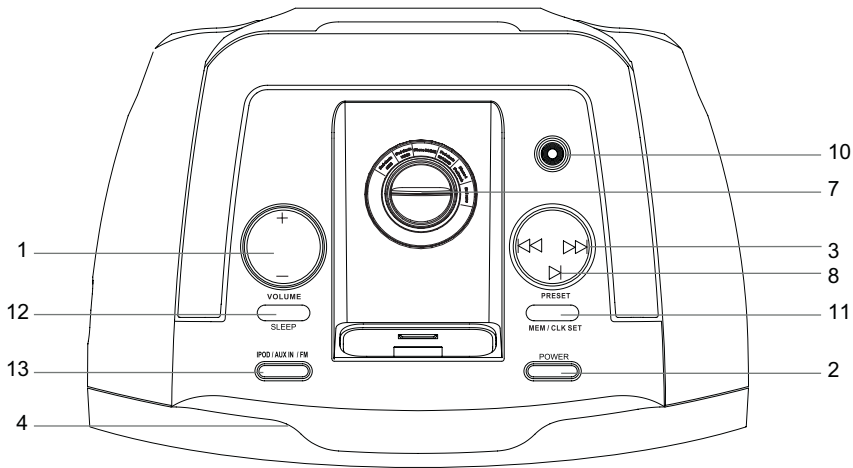

Control Definitions

1. **VOLUME** - Press the Volume Buttons to increase or decrease the volume level.
2. **POWER** - Press the power button to turn on the unit, or to power the unit off.
3. **SKIP/SEARCH** - Press the **Skip/Search** Buttons to skip between tracks on your iPod or iPhone or press and hold the **Skip/Search** Button to search for a specific track.
You can also use this button to adjust the time when setting the clock. Also press the **Skip/Search** Button to scan for available stations in FM mode.
4. **LCD DISPLAY** - Allows you to view the current time and radio station frequency.
5. **AUX IN (LINE IN)** - Allows you to connect and play your MP3 Player or other music devices (line in cable not included).
6. **DC POWER INPUT** - Allows to connect the unit to the power adapter.
7. **ROTATING DOCK FOR iPod and iPhone** - Allows you to rotate the view of your iPod or iPhone so you can watch videos via the dock.
8. **PLAY/PAUSE/PRESET** - Press to begin play or pause play on your iPod or iPhone.
Also press to store and play preset FM radio stations in radio mode.
9. **VIDEO OUT** - Allows you to connect your Boombox to your TV to watch iPod/iPhone videos.
10. **TELESCOPIC ANTENNA** - This unit features a high sensitivity short antenna to ensure simple portability.
11. **MEMORY/CLOCK SET** - With the power off, press and hold to set the clock. In radio mode, press to save the current station as a preset.
12. **SLEEP** - Press repeatedly to set a sleep timer.
13. **IPOD/AUX IN/FM** - Press to switch between iPod/ iPhone, Radio, and Line In modes.

Power


Power Source

This unit comes with an AC Power Adaptor. Please follow the steps below on how to connect the power adaptor.

1. Connect the AC Adaptor plug to the rear of the unit.
2. Then connect the AC Adaptor to your mains power outlet. Make sure you turn the power on at the wall outlet before turning on the unit.
3. To turn the unit on or off you will need to press the Power Button. To turn the unit off completely you must turn the power off at the wall outlet.


CAUTION!

1. Please disconnect the power if you plan to not operate the unit for a long period of time.
2. Do not connect the power or operate this unit with wet or damp hands.

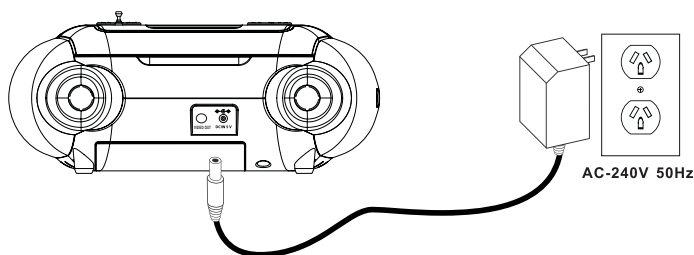

Battery Operation

Before installing the batteries (not included), ensure that the mains power is disconnected. Then remove the battery compartment cover on the back of the unit by carefully pushing the batteries cover off. Then insert 4 x 1.5V C-size batteries (not included) by matching the polarity markings outlined inside the battery compartment. Then replace the cover.

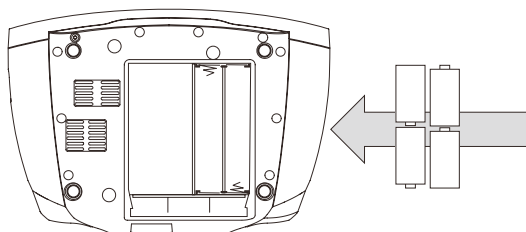

Setting the Time

Make sure the unit is in **STANDBY** mode or hold the **POWER** Button to turn the unit to **STANDBY** mode.

1. Press and hold the **CLOCK SET** Button for one second and then the display will begin to blink.
2. You will then select 12hr or 24hr time by pressing the **SKIP/SEARCH** Buttons and press the **CLOCK SET** Button to confirm.
3. The hour digit will now begin to blink. Press the **SKIP/SEARCH** Buttons to set the hour and press **CLOCK SET** Button to confirm.
4. The minute digit will now begin to blink. Press the **SKIP/SEARCH** Buttons to set the hour and press **CLOCK SET** Button to confirm and the time will be set.

Setting the Sleep Function

The Sleep function allows you to set a time for the unit to automatically turn off. You will be able to set the Sleep Time up to 90 minutes.

To activate the Sleep Time function, press the **Sleep** Button repeatedly to scroll through the available Sleep Times (10 -90 minutes).

When set the unit will continue to play for the selected time and then automatically turn off once the time has elapsed.

To turn off the Sleep Timer before the time has elapsed, press and hold the **Power** Button to turn off the unit. Alternatively press the **Sleep** Button until the off is displayed on screen.

Connecting to Line In (Aux In)

To connect a MP3 Player or other Audio Device you will need a 3.5mm Auxiliary Cable (not included).

1. Connect a 3.5mm Auxiliary Cable to the Audio Input on the unit and to the Audio Output on the audio device you wish to play.
2. Press the **IPOD/AUX IN/FM** Button to select Aux In/Line In mode.
3. Use the navigation controls on the audio device (MP3 Player) to play and control the audio played.
4. To adjust the Volume, you will need to adjust the volume level on the unit and external audio device as desired.

Listening to FM Radio

Radio Operation:

Power on the unit by pressing the **POWER** button, and then press the **IPOD /AUX IN /FM** button to select the FM mode.

Scanning for FM Stations

1. To automatically scan for all available FM stations, press and hold the **SKIP/SEARCH** Buttons and the unit will automatically search for the next available station.
2. Continue to press and hold the **SKIP/SEARCH** Buttons until you find the station you are looking for.
3. To manually search for an exact station or frequency, just press the **SKIP/SEARCH** Buttons and the frequency will manually increase or decrease.

CAUTION!

This unit comes with a high sensitivity short antenna to ensure simple portability. To improve reception we recommend extending the antenna or changing the position so the antenna is able to receive the best possible reception.

Setting a FM Station Preset

1. To set a Station Preset, tune to the station you would like to set.
2. Press and hold the **MEM/CLOCK** Button and the first preset number will be displayed on screen (P01).
3. Press the **SKIP/SEARCH** Buttons to scroll through the preset numbers.
4. Then press the **MEM/CLOCK** Button to save the station to the preset number displayed on screen.

CAUTION!

The Boombox has 20 Station Presets available to store your favourite FM Stations. However please note if/when the power is disconnected the presets will be erased.

Playing a Station Preset

To play a Station Preset, press the Preset Button to scroll to the preset number you would like to play and the station will play automatically.

Listening to iPod / iPhone

Docking an iPod / iPhone

Step 1: Turn the Adjustable Back Support for iPod Dial to the appropriate iPod model or memory size as indicated on the dial.

CAUTION!

iPod models and memory sizes that are not listed on the Dock Adjustment Dial can be docked by manually adjusting the dial to the depth that fits the iPod best.

Step 2: Connect the iPod/iPhone to the connector inside the dock.

CAUTION!

Once the iPhone or iPod is dock and the Boombox is connected to the Mains Power the docked device will charge automatically. Your iPod/iPhone will not charge via battery power.

Listening to your iPhone/iPod

1. Once your iPhone/iPod is docked, press the **IPOD/AUX IN/FM** Button to select iPod mode. Your iPod/iPhone will automatically begin to play the last song or playlist listened to.
2. Alternatively you can press the Play Button to play and pause tracks from your iPod/iPhone.
3. To skip a song or play the next/previous song press the **SKIP/SEARCH** Buttons.
4. Press and hold the **SKIP/SEARCH** Buttons to fast forward or rewind individual songs.

Using the Video Output

Video Output allows you to watch videos from your iPhone/iPod on your TV. You will need a Video Cable (not included) to connect your Boombox and TV.

1. Use your Video Cable to connect your TV's Composite Video Input with the unit's Video Output.
2. Select and turn on the 'TV OUT' option on your iPhone/iPod.
3. Insert your iPhone/iPod on to the dock and turn the unit on.
4. Select the Video Input option on your TV or Monitor.
5. You will now be able to play videos and YouTube clips from your iPhone/iPod on your TV or monitor. Use the iPhone/iPod to select the videos.

CAUTION!

*For new iPod nano, classic, iPod touch and iPhone, **VIDEO OUT** function is disabled by default. Make sure (TV Out) is set to (ON) in the video settings of the docked iPod or iPhone.*

Trouble Shooting

If a fault occurs, first check the points listed below before taking the unit for repair. If you are unable to solve a problem by following the below hints we suggest you consult your retailer or contact our Service and Warranty team United Electrical on 1800 509 394.

WARNING: Under no circumstances should you try to repair the unit yourself.

Problem	Remedy
The unit will not turn on or will not respond	- Disconnect the unit from the power supply for a few minutes. Reconnect it and try again.
No sound output	- Make sure your Headphones are not connected. - Check the volume level and adjust.
iPod/iPhone is not connecting	- Make sure the source is set to iPod mode. - Make sure iPod / iPhone is connected properly. - Pause mode may be activated; press the Play/Pause button again. - Make sure the iPod / iPhone is switched on.
Weak Radio Signal	- Search for another FM Station. - Extend the FM Antenna. - Move the Boombox to a new location to try and receive a stronger signal.

Specification

RMS output:	2W x 2
Power:	AC – DC adapter DC 5 V $\equiv$ 1.5 A
Radio Range:	87.5~108 MHz
Battery:	“C” Size x 4pcs

Warranty

Please keep your receipt as proof of purchase. This product is warranted for any defect in materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only. This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alternation that affects the performance or reliability of the product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In the unlikely event that your product fails to work normally, please contact the **Grundig warranty number 1800 509 394 (Australia) or 0800 450 259 (New Zealand)** and have your receipt of purchase on hand.

This warranty is subject to the following provisions:

- It is only valid within boundaries of the country of purchase;
- The product must be correctly assembled and operated in accordance with the instructions contained in the manual;
- This product must be used solely for domestic purposes;
- The warranty does not cover accidental damage;
- The warranty will be rendered invalid if the product is resold or has been damaged by inexperienced repair;
- The manufacturer disclaims any liability for incidental or consequential damage.

This warranty is in addition to, and does not diminish, your statutory or legal rights.

PO BOX 6287
Silverwater NSW1811
www.grundig.net.au

Grundig warranty : 1800 509 394 Australia

Grundig warranty : 0800 450 259 New Zealand

