

**CLOCK RADIO WITH
UNIVERSAL DOCK FOR IPOD**

The Gold Technical Support Line: 1902 215 259

Personal Product Support
(Charges will apply at \$2.95 per minute)

GCR001IP

Gold

Introduction

Thank you for buying this Grundig product, which is designed to give you many years of trouble-free service.

You may already be familiar with using a similar unit, but please take time to read these instructions. They are designed to familiarize you with the unit's many features and to ensure you get the very best from your purchase.

Safety is important

Your safety and the safety of others is important.

Please therefore, ensure you read the "Safety Instructions" **before** you operate this unit.

Warranty

In the unlikely event that your product fails to work normally, please call the below free phone number to discuss the problem with one of our qualified service engineers.

Australia.

Grundig Warranty: 1800 509 394

New Zealand

Grundig Warranty: 0800 450 259

CONTENTS

Introduction	2
Important Notes	4
Main Operation	6
Location of Controls	7
Setting the Time	8
Setting the Sleep Function	8
Alarm Function	8
Mute Function	9
Listening to the Radio	10
Aux in Operation	10
Aux out Operation	11
Ipod Function	11
Dimmer Function	11
Using Earphones/Headphones	12
Specification	12
Warranty	13

What's in the box

The following should be located within the packaging.

- 1 x Main unit
- 1 x Instruction Manual
- 1 x Remote Control

Please retain all packaging materials for use in the event of the product needing transportation or in the unlikely event of the product requiring repair.

IMPORTANT NOTES

Your hearing is very important to you and to us so please take care when operating this equipment. It is strongly recommended that you follow the listed guidelines in order to prevent possible damage or loss of hearing: **ESTABLISH A SAFE SOUND LEVEL**

- Over time your hearing will adapt to continuous loud sounds and will give the impression that the volume has in fact been reduced. What seems normal to you may in fact be harmful. To guard against this **BEFORE YOUR HEARING ADAPTS** set the volume at a low level.
- Slowly increase the level until you can hear comfortably and clearly and without distortion.
- Damage to your hearing is accumulative and is irreversible.
- Any ringing or discomfort in the ears indicates that the volume is too loud.

Once you have established a comfortable listening level, DO NOT INCREASE THE SOUND LEVEL FURTHER.

SOME DO'S AND DONT'S ON THE SAFE USE OF EQUIPMENT

WARNING:

This equipment has been designed and manufactured to meet safety standards but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

- Do read the operating instructions before you attempt to use the equipment.
- Do ensure that all electrical connections (Including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.
- Contact the Grundig helpline if you are ever in doubt of the installation, operating, or safety of your equipment.
- Don't continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and call the helpline.
- Don't remove any fixed covers as this may expose dangerous voltages.
- Don't leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode. Special arrangements may need to be made for infirm or handicapped people.
- Don't listen to your headphones at high volume, as such use can permanently damage your hearing.
- Don't obstruct the ventilation of the equipment, for example with curtains or soft furnishings.
- Overheating will cause damage and shorten the life of the equipment. Don't allow electrical equipment to be exposed to rain or moisture.

Above all

- Never let anyone, especially children, push anything into holes, slots or any other opening as this could result in a fatal electric shock.
- Never guess or take chances with electrical equipment of any kind. It is better to be safe than sorry!

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE, DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE, DO NOT OPEN THE CABINET, REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

Main operation

- Insert the mains adaptor into the DC IN socket on the back of the radio.
- Insert the mains adaptor into wall socket.

 
Caution: Only connect the mains adaptor to a properly installed wall socket with a voltage matching the “Technical data” of the mains adaptor.

Back up batteries for clock

Two batteries, type AA/1.5V, are required to provide backup power for the clock. This will only power the internal clock and you will see no display.


1. Unclip the battery compartment lid on the bottom of the clock radio.
2. Insert 2 batteries as shown in the battery compartment.
Observe the correct polarity (+/-).
3. Close the battery door.

IR remote key assignment:

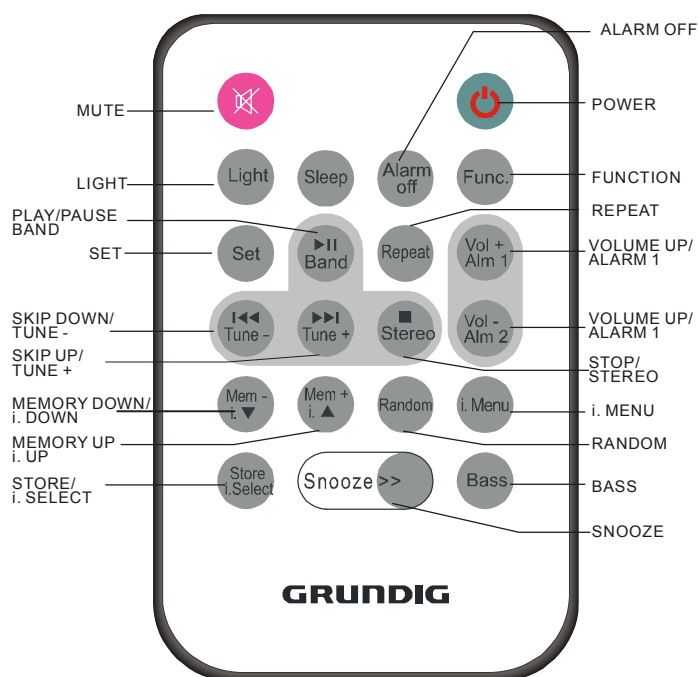


Location of Controls

 Front view

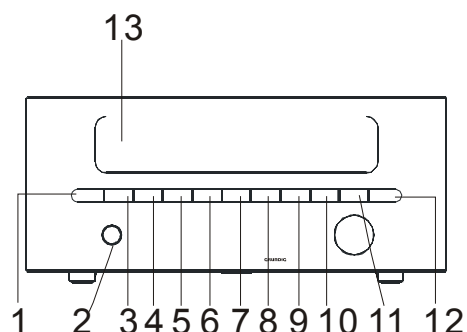


1. LIGHT button
2. Remote sensor
3. SET button
4. STOP/STEREO button
5. SELECT button
6. ALARM OFF button
7. IPOD/MEM - button
8. IPOD/MEM +button
9. FUNCTION button
10. i/MENU button
11. PLAY/PAUSE /BAND button
12. POWER button
13. LCD display
14. Speaker
15. iPod socket
16. ALARM 2/VOL - button
17. ALARM1/ VOL + button
18. SNOOZE button
19. PRE/TUNE - button
20. NEXT/TUNE + button
21. DC IN socket
22. AUX IN socket
23. FM deattached ANT.
24. AUX OUT socket
25. HEADPHONE socket

 Top view

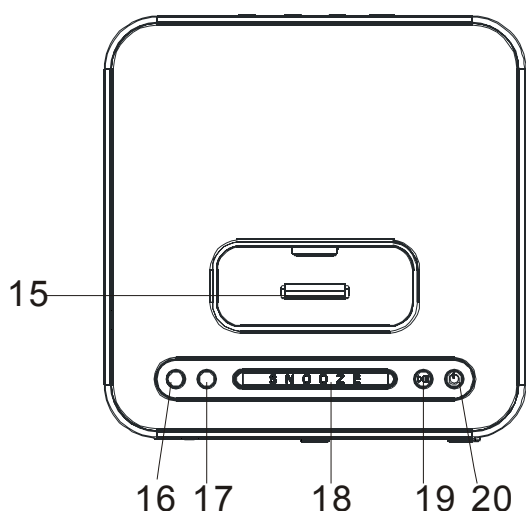

Back view

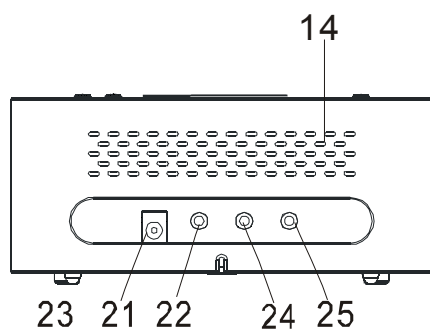 

19. PRE/TUNE - button
20. NEXT/TUNE + button
21. DC IN socket
22. AUX IN socket
23. FM deattached ANT.
24. AUX OUT socket
25. HEADPHONE socket

Setting the Time

1. Press the **SET** button once, the clock icon  and the current time is displayed on the LCD, the hour digit will flash, press **PRE -/+** to adjust the hour.
2. Press **PLAY/PAUSE/BAND** button to confirm the hour setting and the minutes digits flash, press **PRE -/+** to adjust the minutes. The minute digits cannot change the hour digits and will return to 00 after they reach 59.
3. Press **PLAY/PAUSE/BAND** to confirm the minute setting. The display will then return to standby mode.

Note:

After each step, when you release the buttons for 5 seconds, the unit will save the settings automatically and return to the normal display (time).

Setting the Sleep function

1. When the radio is turned on, press the **SLEEP** button, 90 min and SLEEP are displayed on the LCD.
2. Repeatedly press the **SLEEP** button to adjust the sleep timer according to the following display order:
90 min → 60 min → 45 min → 30 min → 15 min → off → 90 min ...
3. Once set the radio will turn off automatically after the selected period of time has passed.

Note:

You can press the **SLEEP** button to view the sleep time when the sleep timer is set. The sleep timer display will automatically return to normal if this key is released for 3 seconds.

Alarm Function

Setting Alarm 1

1. Press the **SET** button twice, the 'Alarm 1' icon and the Alarm 1 time is displayed on the LCD, the hour digit flashes, press **PRE -/+** to adjust the hour.
2. Press the **PLAY/PAUSE/BAND** button to confirm the hour setting and the minute digits flashes, press **PRE -/+** to adjust the minute. The minute digits cannot change the hour digits and will return to 00 after they reach 59.
3. Press **PLAY/PAUSE/BAND** to confirm the minute setting. The display will return to standby mode.
4. Press **ALM1/ALM2** to select the alarm model: iPod, music, buzzer or OFF. When setting the alarm mode, there must be

more than 5 seconds between ALM 1 mode and ALM2 mode.

5. While the alarm time is flashing press **VOL -/+** button to select the desired volume level (00-40) while the alarm is sounding.

Note:

When no adjustments are made to the alarm volume, the volume will revert to the last set level. The default volume level is 20, the unit will reset to this level when unplugged from the mains.

Setting Alarm 2

1. Press the **SET** button three times, the 'Alarm 2' icon and the Alarm 2 time is displayed on the LCD, the hour digit flashes, press **PRE -/+** to adjust the hour.
2. Follow steps 2 to 5 above.

Notes:

- When you select alarm via iPod, ensure the iPod is connected correctly in the socket.
- In the event of a mains power interruption before the alarm is due to sound, when the alarm time is reached the buzzer will sound. You will need to ensure the alarm mode is set to buzzer, and the backup batteries (2xAA) are installed.
- When you do not plan to use the radio for a week or more, please remove the backup batteries. Leaking batteries can damage the radio and such damage is not covered by the warranty.
- Please replace the backup batteries after 1 year.
- Replace the batteries within 30 seconds.

Snooze Function

When the alarm is sounding by pressing the **SNOOZE** button you can delay the alarm by 9 minutes.

Stopping the Alarm

When the alarm is sounding by pressing the **ALARM OFF** button will stop the alarm. The **FUNCTION** or **POWER** button will also stop the alarm. After 24 hours, the alarm will sound again.

Mute Function (only for remote control)

It is used to mute the audio signal coming out from the speaker. Press this key to mute or release the mute function. Note: the following case will release mute function:

1. Change volume
2. Power on/off (by press POWER button)
3. Alarm arrived
4. Snooze time out
5. Change function (by press FUNCTION button)

Listening to the Radio

1. Press the **POWER** button to turn on the radio.
2. Press **PLAY/PAUSE/BAND** button to select the desired band FM or AM.
3. Press the **TUNE -/+** button to tune to the desired station. Hold **TUNE -/+** button to auto search for stations.
4. Press **VOL -/+** button to select the desired volume level (00-40).

Notes:

- For FM reception, fully extend the wire “T” aerial and form a “T” shape until the best results are achieved.
- For AM reception, there is a ferrite rod aerial inside the unit, rotate or move the unit's position until the best results are achieved.

Saving the Station

1. You can store a total of 30 memory stations (20xFM, 10xAM).
2. Press **POWER** to turn on the radio.
3. Press **FUNCTION** button to select RADIO.
4. Press **BAND** button to select your desired band AM or FM.
5. Press **SELECT** button, **MEM** flashes then press **MEM -/+** to select the station number.
6. Press **SELECT** button again to confirm. This station is now saved in the memory.

Selecting Programmed Station

1. Turn on the radio, press the **FUNCTION** button to select RADIO.
2. Press **BAND** button to select the desired band.
3. Press **MEM -/+** button to select the desired station.
4. The display shows the band and the frequency.

Note:

When there are no memorized stations the LCD display will show ‘Empty Preset.’

AUX IN Operation

The unit can be connected to another sound source via the Aux In socket.

1. Press the **POWER** button to turn on the radio.
2. Repeatedly press **FUNCTION** button until the AUX is displayed on the LCD.
3. Connect the plug to the AUX IN socket on the back of the radio.
4. Press **VOL -/+** to adjust the desired volume level.

Note:

In AUX IN mode, only **VOL -/+** and **POWER** buttons are available.

AUX OUT Operation

The sound from the unit can be connected to another audio device via the AUX OUT socket in the back of the radio.

1. Press the **POWER** button to turn on the radio.
2. Select your desired audio source, FM/AM or iPod.
3. The output socket requires a mini stereo jack plug. You will need to refer to the operating instructions for the device that you are connecting to for the connectors on the other end of the cable.
4. Press **VOL +/-** buttons to adjust the desired sound level.

iPod Function

The unit can be connected to an iPod with the iPod socket.

1. Be sure the iPod is connected. Press the **POWER** button to turn on the radio. Repeatedly press **FUNCTION** button to select iPod, and the iPod will turn on automatically.
2. Repeatedly press **PLAY/PAUSE ► II** to play or pause the iPod.
3. Press **VOL +/-** buttons to adjust the volume.
4. Press or hold **SKIP +/-** buttons to select you desired tracks. (Press once to move to the next or previous song; hold down button for fast forward or fast backward.)
5. Press **STOP/STEREO** button to stop the iPod.

Repeat Play (only for iPod)

Repeat feature allows you to repeat one track or repeat all tracks: Repeatedly press **REPEAT** button on the remote to repeat the track as below: Repeat one → Repeat all → Cancel repeat → Repeat one.

Random Play (only for iPod)

Press **RANDOM** button on the remote to toggle between random play mode and normal play mode.

Menu function (only for iPod)

Press **i. MENU** to enter the iPod menu, then press **iPod +/-** button to select your desired menu, then press **SELECT** button to confirm.

Dimmer Function

The backlight can be selected by pressing the **LIGHT** button, there are 4 levels:

Low → Medium → High → Off → Low

Using Earphones or Headphones

To listen to the radio privately, connect an earphone or headphone (not included)

with a 3.5mm plug to the jack on the back of the radio. Plugging in an earphone or headphone disconnects the internal speaker.

Remarks:

In case of malfunction due to electrostatic discharge and/or electrical fast transient (Burst), just reset the product (reconnecting of the power source may be required) to resume normal operation.

Specification

External supply:	10V DC plug-in mains unit
Back up battery:	3V DC 2xAA
DC Voltage Socket:	5.5mm diameter (inner pin
positive, outer negative)	
Receiver Bands:	FM 87.5-108 MHz
	AM 522-1629 kHz
Aerials:	In built T aerial
Power Output (at 10% THD):	2 x 3W
Headphones Socket:	3.5mm Speaker
Diameter:	2 x 57mm

In the course of product improvement, we reserve the right to make technical and design modifications at any time.

Warranty

Please keep your receipt as proof of purchase. This product is warranted for any defect in materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only. This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alternation that affects the performance or reliability of the product.

In the unlikely event that your product fails to work normally, please contact the **Grundig Helpline 1800 509 394 (Australia) or 0800 450 259 (New Zealand)** and have your receipt of purchase on hand.

This guarantee is subject to the following provisions:

- It is only valid within boundaries of the country of purchase;
- The product must be correctly assembled and operated in accordance with the instructions contained in the manual;
- This product must be used solely for domestic purposes;
- The guarantee does not cover accidental damage;
- The guarantee will be rendered invalid if the product is resold or has been damaged by inexperienced repair;
- The manufacturer disclaims any liability for incidental or consequential damaged.

This guarantee is in addition to, and does not diminish, your statutory or legal rights.

PO BOX 6287
Silverwater NSW 1811
www.grundig.net.au

Grundig Helpline: 1800 509 394 Australia
Grundig Helpline: 0800 450 259 New Zealand