



Made for
iPod iPhone

Available on the
App Store

GRUNDIG
GRUNDIG

Instruction Manual

Model: IPD02
App-Driven Alarm Clock Radio
with Dock for iPhone and iPod

*iPhone not included

Introduction

Thank you for buying this **GRUNDIG** product, which is designed to give you many years of trouble-free service.

You may already be familiar with using a similar unit, but please take the time to read these instructions.

Safety is important

Your safety is very important. Please therefore, ensure you read the "Safety Instructions" **before** you operate this unit.

Warranty

In the unlikely event that your product fails to work normally, please call one of our qualified service engineers on either of the below toll free phone numbers to discuss any issues directly.

Australia

Warranty: 1800 509 394

New Zealand

Warranty: 0800 450 259

Contents

Contents.....	2
Safety Instructions.....	3
App-Driven Alarm Clock Radio with Dock for iPhone / iPod.....	4
Controls and Connections.....	5
Connecting your iPhone or iPod	6
G1 App Installation	7
G1 App Operation	7
Product Specifications.....	10
Troubleshooting.....	10
Warranty.....	11

Safety Instructions

Ensure that you read all of the safety instructions before operating this unit.

Safety Considerations

- Ensure that the power cable and other connected cables are protected and are positioned so that they are not likely to be walked on, pinched or damaged.
- Do not position the unit in areas where it may experience humid or damp conditions.
- Do not allow the unit to get wet. You must keep it away from dripping or splashing water.
- Never allow children to insert foreign objects into the holes or slots on the unit.
- Do not cover the ventilation holes with items such as tablecloths or curtains, etc. This may cause the unit to overheat.
- No naked flame sources, such as candles, should be placed on or near the unit.
- Do not place objects filled with liquids, such as vases or jugs, on or near the unit.
- Do not place the unit in a closed cabinet without proper ventilation.

Cleaning

- Disconnect the unit from the mains supply before cleaning.
- Do not use any liquids or aerosol cleaners, as this may damage the unit.
- Use a dry, soft, dust free cloth.

Servicing

- There are no user serviceable parts in this unit. When servicing, refer to qualified service technician.
- Consult your retailer if you are ever in doubt about the installation/operation/safety of the product.

App-Driven Alarm Clock Radio with Dock for iPhone

Carefully remove your **App-Driven Alarm Clock Radio with Dock for iPhone** from the box. You may wish to keep the packaging for future use.

In the Box

Inside the box you will find:

- App-Driven Alarm Clock Radio with Dock for iPhone (Main Unit)
- Power Adapter
- Instruction Manual

Positioning your Unit

Place your unit on a flat and stable surface. Make sure it is not subject to vibrations or movement.

Avoid the following locations:

- Where it will be close to heat radiating sources.
- Where humidity is high and/or there will be poor ventilation.
- Where it will be dusty.
- Where it will be damp or a possibility of water dripping or splashing onto the unit.

Features:

App-Driven Alarm Clock Radio with Dock for iPhone and iPod:

 
- Inbuilt FM Tuner (G1 app required for Playback).
- 2W Speaker Power Output.
- Snooze Button (G1 app required for Playback).
- Dimmer Function.
- Watch You Tube Videos, Movies, Run apps and Play Games while Docked.

Grundig G1 App Includes:


- Dual Alarm Clock with wake to music.
- FM Control.
- Weather Information.
- Customisable UI.

Controls and Connections

Back View

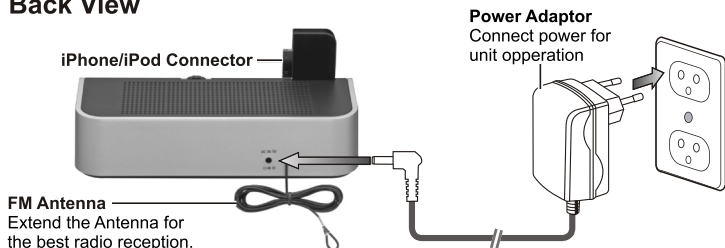

Front View

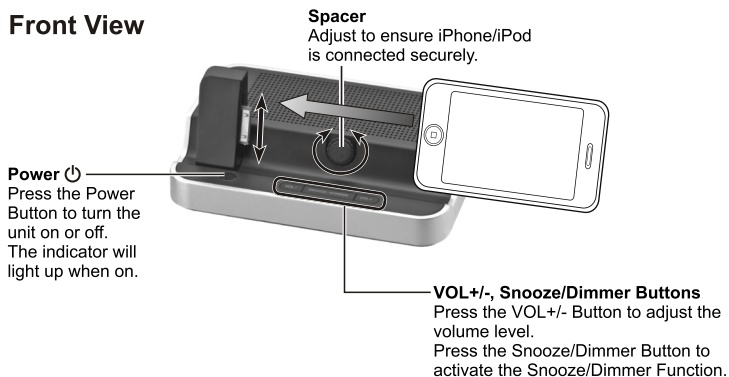 


Connect

1. Connect the AC adaptor to the DC Input and then plug in to your main power supply.
2. Dock your iPod or iPhone to the speaker. Slide the iPhone / iPod connector to fit your model and rotate the docking knob (see the table) to secure the iPod or iPhone.

Connecting your iPhone or iPod

 Here are some easy steps for connecting and adjusting the iPod/iPhone spacer.

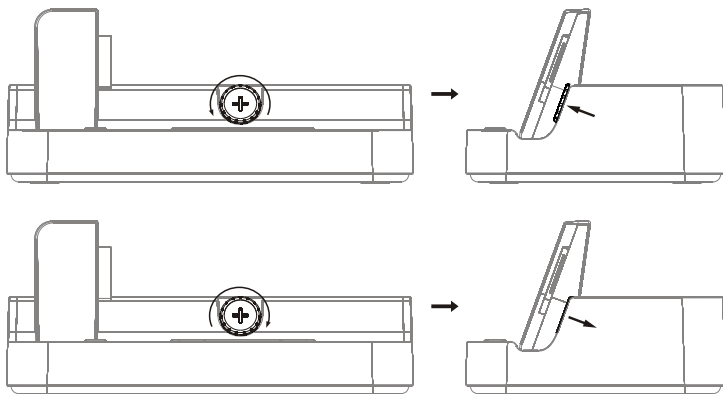

iPod and iPhone Compatibility Information

Model	Capacity	Turns
iPhone		
iPhone 4	16GB 32GB	4
iPhone 3GS	8GB 16GB 32GB	0
iPhone 3G	8GB 16GB	0
iPhone	4GB 8GB 16GB	0
iPod touch		
iPod touch 4th generation	8GB 32GB 64GB	5
iPod touch 3rd generation	32GB 64GB	3
iPod touch 2nd generation	8GB 16GB 32GB 64GB	3
iPod touch 1st generation	8GB 16GB 32GB	4

 
G1 App Installation

The free **Grundig G1 app** is required for FM Radio, Dual Alarm, Weather and Customisable UI. You will be able to download this app from the iTunes App Store for free.

G1 App Operation

Once you have installed the G1 App and connected your iPhone/iPod to the dock, touch the G1  icon to open the app and begin operation.


- Touch the screen to show and hide the icons for radio , settings , and music .
- Touch the radio  icon to set up to 20 FM Station presets.
- Touch the weather  icon to view your local weather.*
- To view more detailed weather information with a 7-day forecast, turn your iPod or iPhone so it is in a vertical position.*
- Touch the settings  icon to manage other G1 App settings.

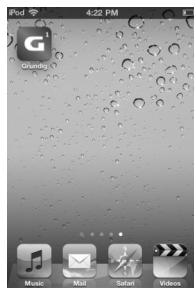

The current weather and location. ———
Click to see current / forecast
weather details.



 The set alarm time ———
Click to enter Help page ———

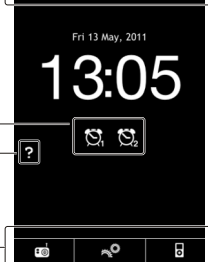


Touch the bottom to get the control panel
of FM radio / setting / music playback ———

G1 App Operation

Radio Function:

Select the Radio  icon from the application menu at the bottom of the screen.

 The radio screen will be displayed.

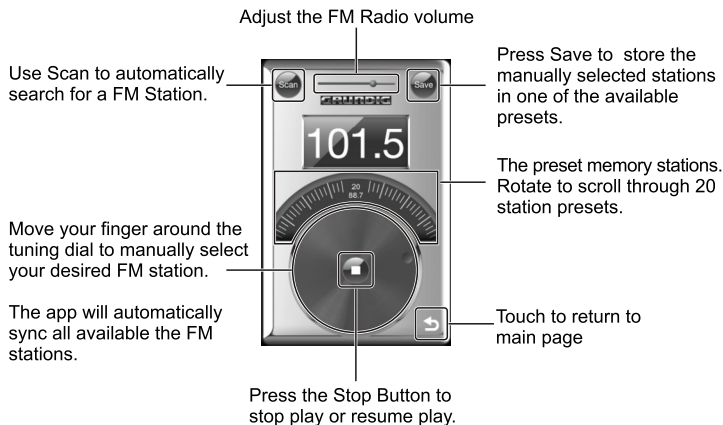

⇒ **Note:**

 
The FM Radio can only be used when your iPhone/iPod is docked and you have downloaded the G1 app.

G1 App Operation

Setting Function:

Select the Setting  icon from the application menu at the bottom of the screen.

The Setting screen will be displayed.

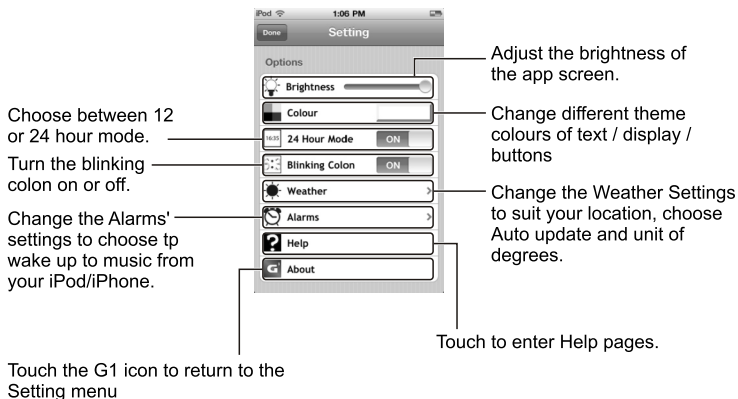

⇒ Tips:

- When your alarm sounds you can press the **Snooze** Button on the unit or on screen to activate Snooze.
- To turn the alarm off press **off** Button on the unit or on the screen.
- During normal operation, press the **SNOOZE/DIMMER** to control the brightness of the LCD display.

Product Specifications

Power Supply..... AC/DC Adapter(supplied): 5V $\overline{\text{---}}$, 2A
FM Frequency range.....87.5MHz - 108MHz
Speaker output power..... 2W(RMS)

Troubleshooting

If a fault occurs, first check the points listed below before taking the unit for repair. If you are unable to solve a problem by following the below hints we suggest you consult your retailer or contact our Service and Warranty team United Electrical on **1800 509 394**.

WARNING: Under no circumstances should you try to repair the unit yourself.

Problem	Remedy
Power the system can't be turned on or does not respond	- The AC adaptor must be connected properly and the mains power must be turned on. - If connected correctly, disconnect the power for 15 minutes. Reconnect and try again.
I can't activate FM Mode or the Alarm Function.	- You must download the G1 app to activate this function. This is a free download from the App Store.
No sound output	- Adjust the Volume by operating the volume button.
iPod / iPhone the unit won't play, iPod files or will not function as expected	- Make sure iPod / iPhone is connected properly. - Make sure the iPod / iPhone is switched on.

Warranty

Please keep your receipt as proof of purchase. This product is warranted for any defect in the materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only. This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alteration that affects the performance or reliability of the product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In the unlikely event that your product fails to work normally, please contact the Grundig Warranty Team **1800 509 394** (Australia)

and **0800 450 259** (New Zealand).

You should have your receipt of purchase on hand.

This warranty is subject to the following provisions:

- It is only valid within boundaries of the country of purchase.
- The product must be correctly assembled and operated in accordance with the instructions contained in the manual.
- This product must be used solely for domestic purposes.
- The warranty does not cover accidental damage.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damaged.

This warranty is in addition to, and does not diminish, your statutory or legal rights.

PO BOX 6287
Silverwater NSW 1811
www.grundig.net.au