



Instruction Manual

Model: IPS01
iPhone Docking Speaker System

Introduction

Thank you for buying this **GRUNDIG** product, which is designed to give you many years of trouble-free service. You may already be familiar with using a similar unit, but please take the time to read these instructions.

Safety is important

Your safety is very important. Please therefore, ensure you read the “Safety Instructions” **before** you operate this unit.

Warranty

In the unlikely event that your product fails to work normally, please call one of our qualified service engineers on either of the below toll free phone numbers to discuss any issues directly.

Australia

Grundig Warranty: 1800 509 394

New Zealand

Grundig Warranty: 0800 450 259

CONTENTS

Introduction 2

Important Notes 4

Location of Controls (Main Unit) 6

Control Definitions (Main Unit) 7

Location of Controls (Remote) 8

Control Definitions (Remote) 9

Setup 10

iPod and iPhone 11

3.5mm Audio Input and Composite Video Output 12

Playing and Charging an iPod 13

Warranty 15

What’s in the box

Carefully remove your Stereo Speaker System with Dock for iPhone from the box. You may wish to keep the packaging for future use.

In the Box

Inside the box you will find:

Stereo Speaker System with Dock for iPhone (Main Unit)

Power Adaptor

Remote Control with battery

iPod/iPhone docking adaptors

User Guide

IMPORTANT NOTES

Ensure that you read all of the safety instructions before operating this unit.

Safety Considerations

Ensure that the power cable and other connected cables are protected and are positioned so that they are not likely to be walked on, pinched or damaged.

Do not position the unit in areas where it may experience humid or damp conditions.

Do not allow the unit to get wet. You must keep it away from dripping or splashing water.

Never allow children to insert foreign objects into the holes or slots on the unit.

Do not cover the ventilation holes with items such as tablecloths or curtains, etc. This may cause the unit to overheat.

No naked flame sources, such as candles, should be placed on or near the unit.

Do not place objects filled with liquids, such as vases or jugs, on or near the unit.

Do not place the unit in a closed cabinet without proper ventilation.

Cleaning

Disconnect the unit from the mains supply before cleaning.

Do not use any liquids or aerosol cleaners, as this may damage the unit.

 
Use a dry, soft, dust free cloth.

Servicing

There are no user serviceable parts in this unit. When servicing, refer to qualified service technician.

Consult your retailer if you are ever in doubt about the installation/operation/safety of the product.


Main Unit

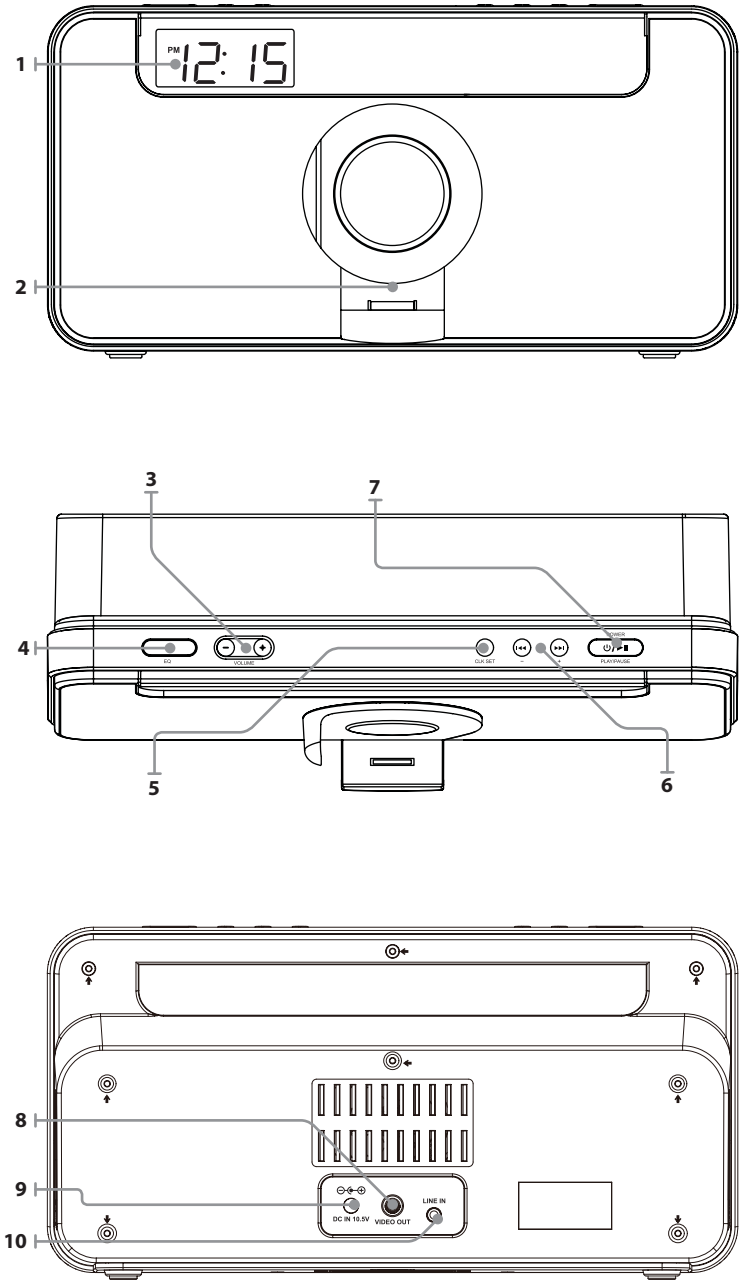

Control Definitions

1. **LCD DISPLAY:** Allows you to view the current time, which can be set manually or automatically from your iPhone.
2. **ROTATING DOCK:** Allows you to rotate the view of your iPod/iPhone so you can watch videos via the dock.
3. **VOLUME:** Press the VOLUME Button to adjust the volume.
4. **EQ:** Press the EQ Button to switch between the preset equalizer modes Rock, Classic, Jazz, and Pop.
5. **CLOCK SET/MENU:** When the unit is Standby, press and hold the CLOCK SET/MENU Button to begin setting the clock.
6. **SKIP/SEARCH:** Press the SKIP/SEARCH Button to skip between tracks on a docked iPod or iPhone or press and hold to search for an individual track. When the unit is in Clock setting mode, press the SKIP/SEARCH Button to adjust the time.
7. **POWER/PLAY/PAUSE:** Press the POWER/PLAY/PAUSE Button to turn the power on or press and hold to turn the unit off. Once the unit is on, press the POWER/PLAY/PAUSE Button to play or pause playback on your iPhone/iPod.
8. **COMPOSITE VIDEO OUTPUT:** Allows you to connect this Speaker Dock to your TV to watch the movies/videos from your iPhone/iPod on your TV.
9. **DC POWER INPUT:** Allows to connect the unit to the AC/DC adapter supplied.
10. **3.5mm AUDIO INPUT:** Allows you to connect and play your MP3 Player or other music devices.

 Remote Control

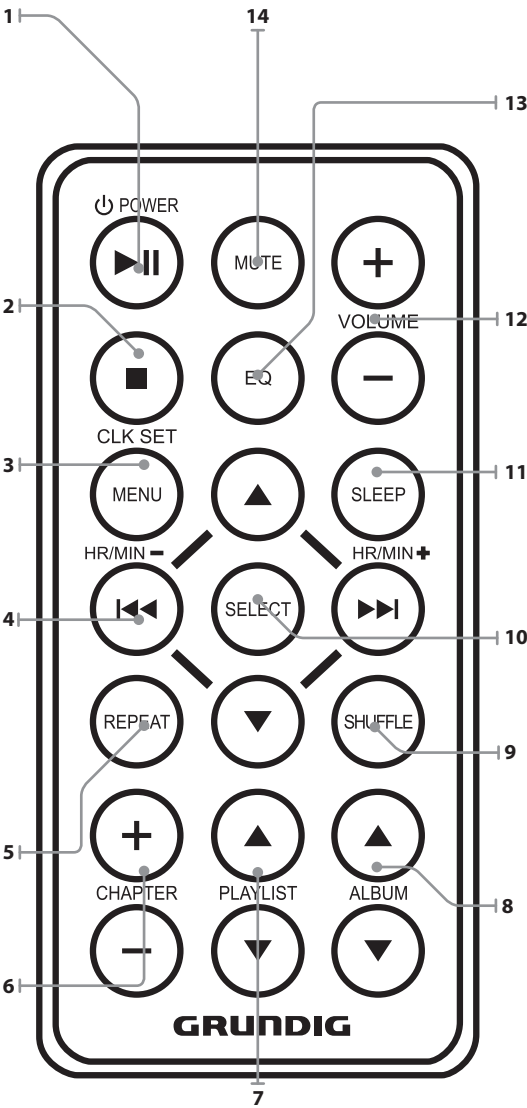


Control Definitions

1. **POWER/PLAY/PAUSE:** Press the POWER/PLAY/PAUSE Button to turn the power on or press and hold to turn the unit off. Once the unit is on, press the POWER/PLAY/PAUSE Button to play or pause playback on your iPhone/iPod.
2. **STOP:** Press the Stop Button to stop playback at anytime.
3. **CLOCK SET/MENU:** When the unit is off, press and hold the CLOCK SET/MENU Button to begin setting the clock. When the unit is on use the CLOCK SET/MENU Button to enter the menu.
4. **SKIP/SEARCH:** Press the SKIP/SEARCH Button to skip between tracks on a docked iPod or iPhone or press and hold to search for an individual track. When the unit is off, press the SKIP/SEARCH Button to adjust the time when setting the clock.
5. **REPEAT:** Press the REPEAT Button to cycle through the repeat options.
6. **CHAPTER:** Press the CHAPTER Button to switch between the chapters on a docked iPod/iPhone.
7. **PLAYLIST:** Press the PLAYLIST Button to switch between playlists on a docked iPod/iPhone.
8. **ALBUM:** Press the ALBUM Button to switch between albums on a docked iPod/iPhone.
9. **SHUFFLE:** Press the SHUFFLE Button to activate or deactivate the shuffle mode on a docked iPod/iPhone.
10. **SELECT:** Press the SELECT Button to make selections in the menu.
11. **SLEEP:** Press the SLEEP Button repeatedly to set the sleep timer.
12. **VOLUME:** Press the VOLUME Button to adjust the volume.
13. **EQ:** Press the EQ Button to switch between the preset equalizer modes Rock, Classic, Jazz, and Pop.
14. **MUTE:** Press the MUTE Button to turn the volume off only.

Setup

Power

 
DC power input: requires an AC/DC power adapter (included)

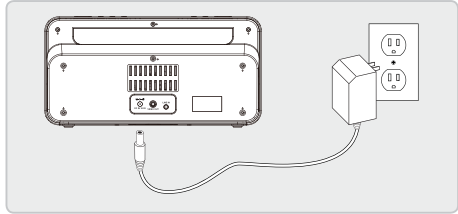

Backup Battery


Backup battery: requires 2 AAA batteries (not included)

 The backup battery will save the set time in case of an unexpected power outage.

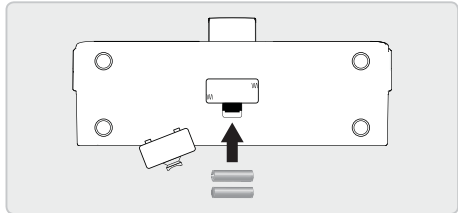

Remote

 Requires a CR2025 battery (pre-installed)



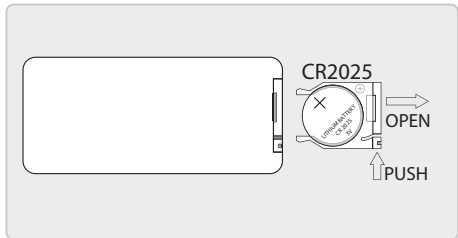


WARNING: The cell battery contains mercury. Please dispose of responsibly.

iPod and iPhone


Connecting the Spacers

   1. Place the spacer onto the dock and turn clockwise to lock the spacer into place.
2. To remove the spacer, turn counter-clockwise.

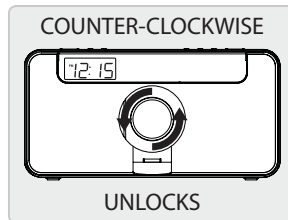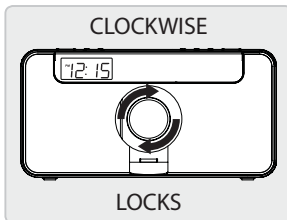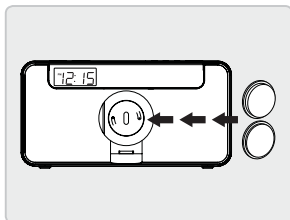


Docking an iPod or iPhone

 1. Follow the instructions for Connecting the Spacers and use as needed to secure your iPod or iPhone on to the dock.
2. Connect the iPod/iPhone and adaptor to the Rotating Dock.
3. Once the iPhone/iPod is connected to the unit it will begin to charge. Ensure the Main Power is connected.


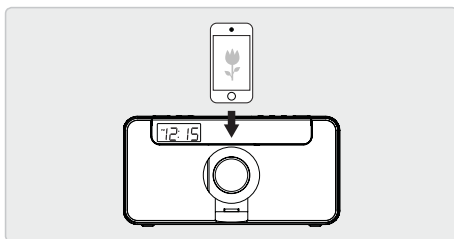


Playing a Docked iPod or iPhone

 1. Follow the instructions for Docking an iPod or iPhone.
2. Press the **POWER** button to turn the speaker on.
3. Press the **POWER/PLAY/PAUSE** button to begin playing the docked iPod or iPhone.
4. Refer to page 7 or 9 on how to use the unit or remote control Buttons to play specific songs, playlists or albums on a dock iPhone/iPod.

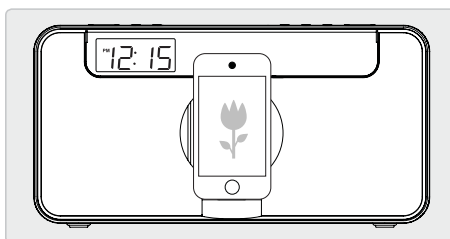

Rotating Dock

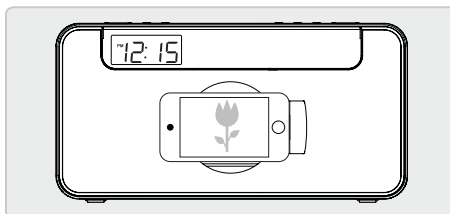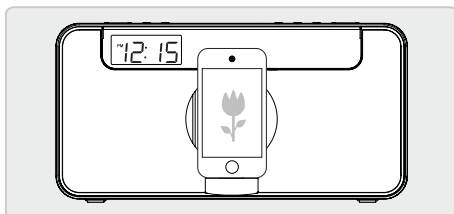  

3.5mm Audio Input and Composite Video Output

Using the 3.5mm Audio Input

 
To connect a MP3 Player or other Audio Device you will need a 3.5mm Auxiliary Cable (not included).

1. Disconnect any iPhone/iPod from the unit.
2. The unit will automatically switch to Line In mode when a 3.5mm Auxiliary Cable is connected to the 3.5mm Audio Input as long as there isn't an iPhone/iPod in the dock.
3. Connect a 3.5mm Auxiliary Cable to the Audio Input on the unit and to the Audio Output on the audio device you wish to play.
4. Use the navigation controls on the audio device (MP3 Player) to play and control the audio played.

Using the Composite Video Output

To watch videos from your iPhone/iPod on your TV you will need a RCA Composite Video Cable (not included).

1. Use your RCA Composite Video Cable to connect your TV's Composite Video Input with the unit's Composite Video Output.
2. Select and turn on the 'TV OUT' option on your iPhone/iPod.
3. Insert your iPhone/iPod on to the dock and turn the unit on.
4. Select the Video Input option on your TV or Monitor.

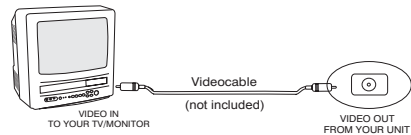

5. You will now be able to play videos and YouTube clips from your iPhone/iPod on your TV or monitor. Use the iPhone/iPod to select the videos.

Playing and Charging an iPod

Connecting your iPhone or iPod

1. Select the iPhone/iPod adaptor that corresponds to your model from the table below.
Please note the highlighted adaptor models which are included with this unit.
2. Adjust the iPhone/iPod dock support to fit your model.
3. Place the adaptor on the dock at the top of the unit with the two tabs facing forwards.
4. To remove the adaptor, press the back of the adaptor and pull it up.

iPad, iPod, and iPhone Compatibility Information

MODEL	CAPACITY	PLAY & CHARGE	VIDEO OUTPUT	ROTATING SUPPORT
iPad				
iPad	8GB 16GB 32GB			
iPhone				
iPhone 4	16GB 32GB	•	•	•
iPhone 3GS	8GB 16GB 32GB	•	•	•
iPhone 3G	8GB 16GB	•	•	•
iPhone	4GB 8GB 16GB	•	•	•
iPod touch				
iPod touch 4th generation	8GB 32GB 64GB	•	•	•
iPod touch 3rd generation	32GB 64GB	•	•	•
iPod touch 2nd generation	8GB 16GB 32GB 64GB	•	•	•
iPod touch 1st generation	8GB 16GB 32GB	•	•	•
iPod nano				
iPod nano 6th generation	8GB 16GB	•	•	
iPod nano 5th generation (video camera)	8GB 16GB	•	•	
iPod nano 4th generation (video)	8GB 16GB	•	•	
iPod nano 3rd generation (video)	4GB 8GB	•	•	
iPod nano 2nd generation (aluminum)	2GB 4GB 8GB	•		
iPod nano 1st generation	1GB 2GB 4GB	•		
iPod and iPod mini				
iPod classic (2009)	120GB 160GB	•	•	
iPod classic (2007)	160GB			
iPod classic	80GB	•	•	
iPod 5th generation (video)	60GB 80GB			
iPod 5th generation (video)	30GB			
iPod 4th generation (color display)	40GB 60GB			
iPod 4th generation (color display)	20GB 30GB			
iPod 4th generation	40GB			
iPod 4th generation	20GB			
iPod mini	4GB 6GB			

Note: Ensure that you use the dock adaptor corresponding to your iPod in order to ensure that it is installed in a stable way and that the electrical contact is good.

Trouble Shooting

If a fault occurs, first check the points listed below before taking the unit for repair. If you are unable to solve a problem by following the below hints we suggest you consult your retailer or contact our Service and Warranty team United Electrical on 1800 509 394.

WARNING: Under no circumstances should you try to repair the unit yourself.

Problem	Remedy
The unit won't turn on or does not respond	- The AC adaptor must be connected properly and the mains power must be turned on. - If connected correctly, disconnect the power for 15 minutes. Reconnect and try again.
No sound output	- Make sure your Headphones are not connected and that mute has not been selected. - Check the volume level and adjust.
iPod/iPhone is not connecting	- Make sure the source is set to iPod mode, your iPod /iPhone is connected firmly and both your devices are turned on. - Press the Play/Pause Button to ensure the unit is in play mode.

Specifications

RMS output:	3W x 2
Power:	AC – DC adapter DC 10 V === 1.5 A
Battery:	AAA Size x 2 for Clock Backup CR2025 x 1 for Remote

Warranty

Please keep your receipt as proof of purchase. This product is warranted for any defect in materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only. This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alternation that affects the performance or reliability of the product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In the unlikely event that your product fails to work normally, please contact the **Grundig warranty number 1800 509 394 (Australia) or 0800 450 259 (New Zealand)** and have your receipt of purchase on hand.

This warranty is subject to the following provisions:

- It is only valid within boundaries of the country of purchase;
- The product must be correctly assembled and operated in accordance with the instructions contained in the manual;
- This product must be used solely for domestic purposes;
- The warranty does not cover accidental damage;
- The warranty will be rendered invalid if the product is resold or has been damaged by inexperienced repair;
- The manufacturer disclaims any liability for incidental or consequential damaged.

This warranty is in addition to, and does not diminish, your statutory or legal rights.

PO BOX 6287
Silverwater NSW 1811
www.grundig.net.au

Grundig warranty: 1800 509 394 Australia
Grundig warranty: 0800 450 259 New Zealand

