

# MPiXX VP 6200/30GB

## Packing contents

- 1 MPiXX VP 6200/30GB media player
- 2 Installation CD
- 3 Stereo earphones
- 4 Concise operating manual
- 5 CD for format conversion
- 6 USB cable
- 7 Mains adapter
- 8 Audio/video cable
- 9 Carrying strap
- 10 Y cable
- 11 Stand and charging unit
- 12 Carrying bag

### Important:

You will find a full operating manual for your player as a pdf file on the accompanying installation CD.

In order to open this pdf file, you must have the Adobe Reader program on your computer. If you have not yet installed it, you can download it free of charge at [www.adobe.com](http://www.adobe.com).

## General and safety instructions

This device is designed for recording and playing music, video, picture and voice files and as an FM (VHF) radio. Any other use is expressly prohibited.

Do not drop the device. Avoid pressing on the display. Do not place the device near magnetic objects.

Make sure the device is protected against moisture (dripping and splashing water), direct sunlight and heat.

Do not place any vessels such as vases on the device. Do not place any naked flames such as candles on the device.

Only use the mains adapter provided for charging the device.

Never open the device casing. No warranty claims are accepted for damage caused by improper handling.

### Cleaning

Clean the device with a clean, dry duster. Do not use any cleaning agents.

# MPiXX VP 6200/30GB

## Controls



- |                     |                                                                                                                                   |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| <b>1 Camera</b>     | Built-in camera lens.                                                                                                             |
| <b>2 ON/OFF</b>     | Switches the player on and off. Switches the LC screen on and off.                                                                |
| <b>3 LED</b>        | Mode indicator. Lights up blue when reading from HD; goes out when reading from RAM; flashes when the LC display is switched off. |
| <b>4 LED</b>        | Charge indicator. Lights up red when charging, orange at 80% charge, green when fully charged.                                    |
| <b>5 Screen</b>     | LCD screen.                                                                                                                       |
| <b>6 Jog Button</b> | Multifunction button. Navigates up and down, left and right in menus. Press to activate menu options.                             |
| <b>7 MENU</b>       | Switches back one menu level. Opens the main menu, press down to see options in the sub-menus.                                    |
| <b>8 A-B</b>        | Marks a section, which is then constantly repeated. Enlarges pictures when playing picture files (zoom).                          |
| <b>9 OSD</b>        | Shows and hides screen information. Changes the colour setting in the main menu.                                                  |
| <b>10 ESC</b>       | Opens the main menu.                                                                                                              |

# MPiXX VP 6200/30GB


## Controls



- |                                                                                               |                                                                                               |
|-----------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| <b>11 HOLD</b>                                                                                | Disables and enables the buttons.                                                             |
| <b>12 RESET</b>                                                                               | Restores the player to the default settings and initialises it in the event of a malfunction. |
| <b>13 MIC</b>                                                                                 | Microphone for voice recording.                                                               |
| <b>14 REC</b>                                                                                 | Starts recording in music and video formats.                                                  |
| <b>15 O</b>                                                                                   | Eyelet for the carrying strap.                                                                |
| <b>16 Speaker</b>                                                                             | Built-in speaker.                                                                             |
| <b>17 LINE IN</b>                                                                             | Audio-video input.                                                                            |
| <b>18 LINE OUT</b>                                                                            | Audio-video output.                                                                           |
| <b>19</b>  | Socket for connecting the earphones.                                                          |
| <b>20 Speaker</b>                                                                             | Built-in speaker.                                                                             |
| <b>21 USB</b>                                                                                 | USB port.                                                                                     |
| <b>22 DC 5V</b>                                                                               | Socket for the mains adapter cable.                                                           |

# MPiXX VP 6200/30GB

## Environmental note

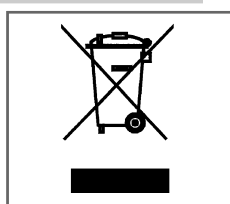

This product has been made from high-quality parts and materials which can be re-used and recycled.

Therefore, do not throw the product away with normal household waste at the end of its life. Take it to a collection point for recycling electrical and electronic devices. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please find out about collection points operated by your local authority.

Help protect the environment by recycling used products.

## Technical data



This device is noise-suppressed according to the applicable EU directives. This product fulfils the European directives 89/336/EEC, 73/23/EEC and 93/68/EEC.

This device conforms to the safety regulation DIN EN 60065 (VDE 0860) and thereby the international safety regulation IEC 60065.

### Audio

**Channels:**  
Stereo left/right

**Frequency range:**  
20 Hz ... 20 kHz

**Output:**  
Earphones: 2 x 12 mW (16 Ω)  
Speakers: 2 x 250 mW (8 Ω)

**Noise voltage ratio:**  
≥ 90 dB

### FM tuner

**Reception range:**  
87.5 MHz ... 108.0 MHz

**Noise voltage ratio:**  
≥ 50 dB (A Filter)

### Memory

1.8" / 30 GB HDD

### USB

2.0 High Speed

### File formats

**Video (decoder):**  
AVI, DivX, XviD, ASF

**Audio (decoder):**  
MPEG 1/2/2.5 Layer 3, WMA

**Picture (decoder):**  
JPEG, GIF, BMP

**Files (encoder):**  
Audio: MP3  
Video: ASF (640 x 480, 320 x 240)

**Text:**  
Supports TXT

**Bit rate:**  
MP3: 16 kbps ... 320 kbps, VBR (variable)  
WMA: 32 kbps ... 320 kbps

**Song info display:**  
ID3 Tag, version1/version 2

### General information

**Power supply:**  
Mains adapter DC 5V   
Built-in 3.7 V Li-polymer battery

**Screen:**  
3.5" TFT LCD

**Dimensions and weight:**  
W x H x D: 116 x 78 x 23 mm  
Weight: approx. 220 g.