



GRUNDIG
GRUNDIG

Instruction Manual

Model: PAD01
Portable Speaker with Dock for iPad

Introduction

Thank you for buying this **GRUNDIG** product, which is designed to give you many years of trouble-free service.

You may already be familiar with using a similar unit, but please take time to read these instructions. They are designed to familiarise you with the unit's many features and to ensure you get the very best from your purchase.

Safety is important

Your safety is very important. Please therefore, ensure you read the "Safety Instructions" **before** you operate this unit.

Warranty

In the unlikely event that your product fails to work normally, please call one of our qualified service engineers on either of the below toll free phone numbers to discuss any issues directly.

Australia

GRUNDIG Warranty: 1800 509 394

New Zealand

GRUNDIG Warranty: 0800 450 259

Contents

Introduction 2

What's in the Box 3

Safety Instructions 4

Your Docking System 5

Getting Started 7

Using the Dock 9

Other Functions 12

Troubleshooting 13

Specifications 14

Warranty 15

What's in the box

Carefully remove your **Portable Speaker with Dock for iPad** from the box. You may wish to keep the packaging for future use. Inside the box you will find:

- 1 x Portable Speaker with Dock for iPad (Main Unit)
- 1 x Remote Control with Battery
- 2 x Rubber Spacers for iPad2
- 1 x Power Adaptor
- 1 x iPad2 Support
- 1 x User Guide

Safety Instructions

Ensure that you read all of the safety instructions before operating this unit.

Safety Considerations

- Ensure that the power cable and other connected cables are protected and are positioned so that they are not likely to be walked on, pinched or damaged.
- Do not position the unit in areas where it may experience humid or damp conditions.
- Do not allow the unit to get wet. You must keep it away from dripping or splashing water.
- Never allow children to insert foreign objects into the holes or slots on the unit.
- Do not cover the ventilation holes with items such as tablecloths or curtains, etc. This may cause the unit to overheat.
- No naked flame sources, such as candles, should be placed on or near the unit.
- Do not place objects filled with liquids, such as vases or jugs, on or near the unit.
- Do not place the unit in a closed cabinet without proper ventilation.

Cleaning


- Disconnect the unit from the mains supply before cleaning.
- Do not use any liquids or aerosol cleaners, as this may damage the unit.
- Use a dry, soft, dust free cloth.

Servicing


- There are no user serviceable parts in this unit. When servicing, refer to qualified service technician.
- Consult your retailer if you are ever in doubt about the installation/operation/safety of the product.

Your Docking System

FRONT

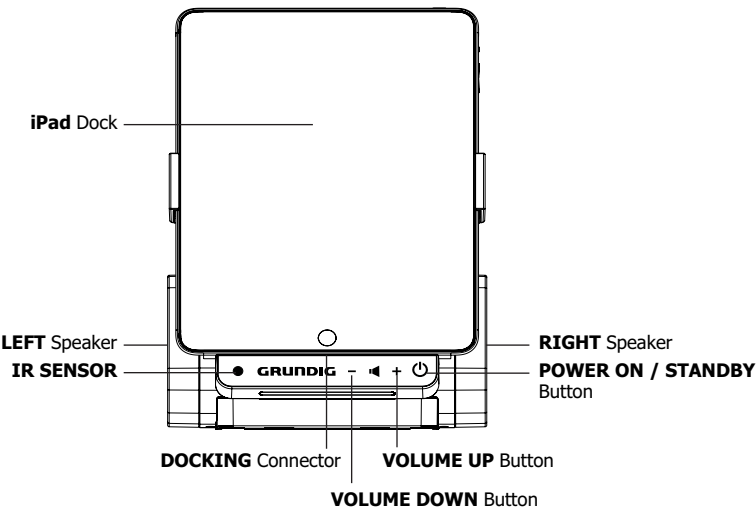


REAR

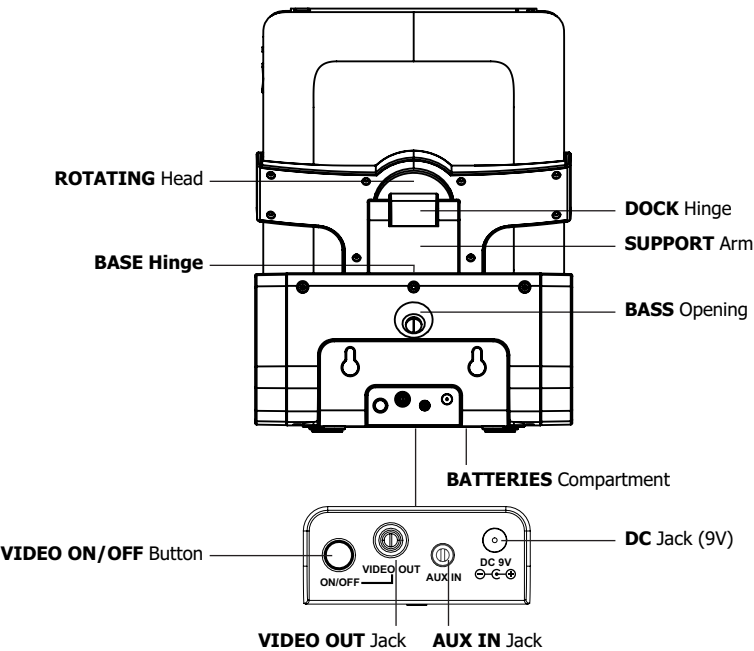

Your Docking System

 Remote Control

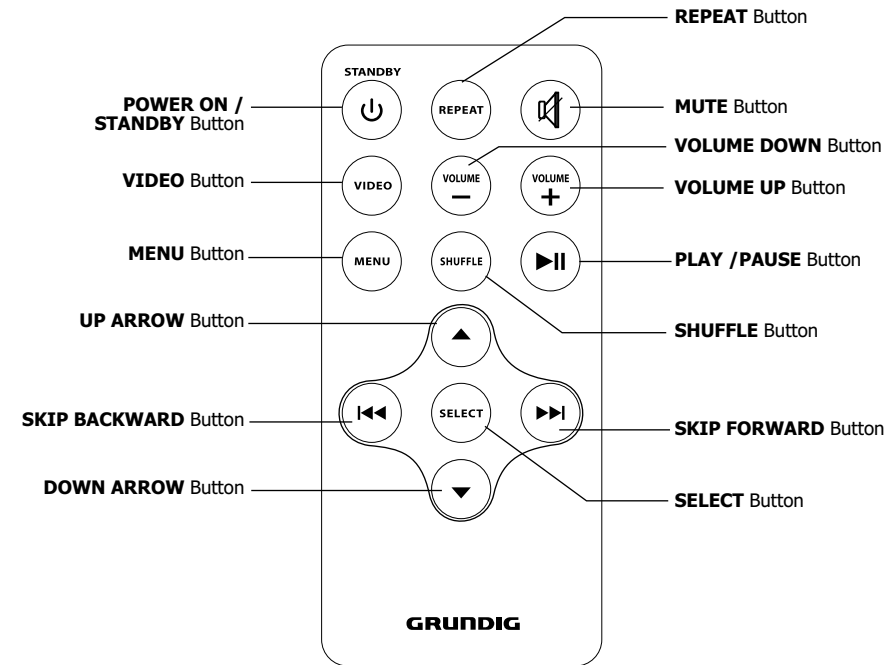


POWER ON/ STANDBY Button	Press the STANDBY Button to turn the power on or off.
VIDEO Button	Press the VIDEO Button to play your iPad/iPhone/iPod videos on your TV screen once connected via Composite Video Out.
MENU Button	Press the MENU Button to enter the iPhone/iPod Menu.
UP ARROW Button	Press the UP ARROW Button to scroll through the on-screen playlist or menu options.
SKIP BACKWARD Button	Press the SKIP BACKWARD Button to rewind in a track or skip between tracks.
DOWN ARROW Button	Press the DOWN ARROW Button to scroll through the on-screen playlist or menu options.
REPEAT Button	Press the REPEAT Button to cycle through the repeat options.
MUTE Button	Press the MUTE Button to turn the volume off only.
VOLUME DOWN Button	Press the VOLUME DOWN Button to decrease the volume.
VOLUME UP Button	Press the VOLUME UP Button to increase the volume.
PLAY/PAUSE Button	Press the PLAY/PAUSE Button to play or pause playback on your iPad/iPhone/iPod.
SHUFFLE Button	Press the SHUFFLE Button to activate or deactivate the shuffle mode on a docked iPod/iPhone/iPad.
SKIP FORWARD Button	Press the SKIP FORWARD Button to skip forwards in a track or skip between tracks.
SELECT Button	Press the SELECT Button to make selections in the menu.

Getting Started

1 Setting up the Docking System

 1. Insert the connector of the power adaptor into the **DC IN** jack on the rear of the unit.
2. Insert the power adaptor plug into the wall socket and switch the socket on.
3. Gently dock your iPad/iPhone/iPod into the docking connector.
4. Press the  button to turn the unit on.

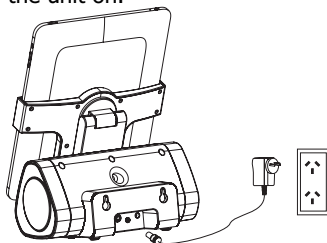

Caution:

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed at the bottom of the unit.
- Risk of electric shock! When you unplug the power adaptor, always pull the plug from the socket and ensure both the unit and mains power is turned off. Never pull the cord.
- Before connecting the power adaptor, ensure you have completed all other connections.


2 Using the Docking System with Batteries

This unit can be powered by six UM-3 (LR6) "AA" type batteries.

1. Open the battery compartment cover located at the bottom of the unit.
2. Insert six "AA" type batteries (not supplied) into the battery compartment at the bottom of the unit observing the polarity markings on the base of the battery compartment.

Alkaline batteries are recommended for longer life.

3. Close the battery compartment cover.

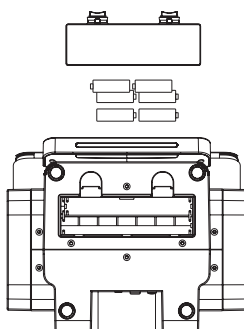

Caution:


It is important to replace the battery with the same type of battery outlined above.

- If the unit is not used for an extended period of time, we recommend removing the battery to ensure that the battery does not leak.
- Dispose of batteries in a safe and environmentally friendly way.

Getting Started


3 Using the Remote Control

Remove the plastic insulation tab from the battery compartment to activate the remote control before first use.

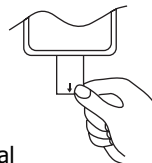

When the operation of the remote control becomes intermittent or the effective distance is significantly decreased, it is time to replace the original battery with a new type CR2025 3V === lithium battery as follows:

1. Unlock ❶ and slide out the battery holder ❷ from the remote control case.
2. Replace the weak/dead battery with a new one. Be sure the battery is installed correctly. The remote will not work if the battery is installed with the wrong polarity.
3. Insert the battery holder back into the battery slot.

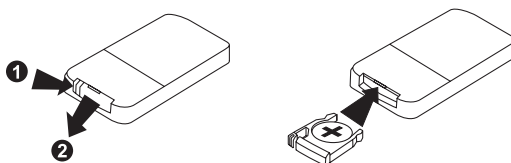

Warning:

It is important to replace the battery with the same type of battery outlined above.

- If the unit is not used for an extended period of time, we recommend removing the battery to ensure that the battery does not leak.
- Dispose of batteries in a safe and environmentally friendly way.


4 Connecting External Devices

This unit can be connected to a number of external devices using the **AUX IN** jack on the rear of the unit. This requires a 3.5mm stereo audio cable (not supplied). Please refer to page 12 for more instructions.


Using the Dock

Setting up the Dock

1. Gently dock your iPad, iPhone, or iPod touch while the unit is in portrait mode.
2. If you wish you can rotate the dock to view your iPad, iPhone or iPod in landscape mode.
3. To ensure the unit is supported, adjust the Base Hinge forward until it locks into place.
4. You can also adjust the viewing angle by tilting the iPad Dock forwards or backwards.

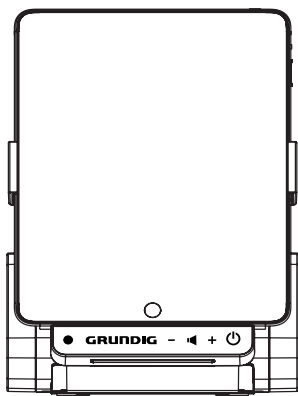

Portrait Mode

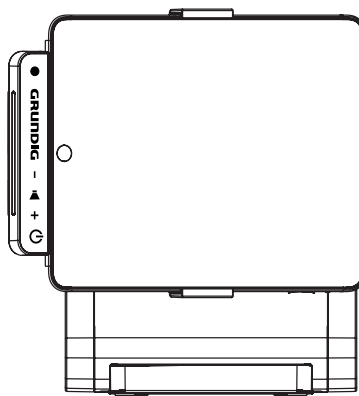

Landscape Mode

Recharging your Apple Device

Whilst your iPad/iPhone/iPod is docked and unit is plugged into the mains power, your iPad/iPhone/iPod will charge automatically even while you play your favourite tunes.

If you wish to just charge your iPad/iPhone/iPod turn the unit to standby mode to reduce power consumption.

Note: The unit will not charge your iPad/iPhone/iPod in battery mode.

Using the Dock

Listening to Music on your Apple Device

This unit works with all models of iPad, iPhone, iPod touch, and iPod nano.

1. Dock your Apple device carefully and securely onto the Docking Connector.
2. Press the  button to turn on the unit and the touch control panel will illuminate.
3. Select the **iPod** function from the main screen on the iPad/iPhone/iPod touch or **Music** on iPod to access your music library.
4. After selecting your favourite song, press the  button on the remote to play or pause the track.
5. Press the **Skip Forward** button  on the remote to skip to the next chapter or to the end of the track being viewed. Press and hold the **Skip Forward** button to fast forward through the track.
6. Press the **Skip Backwards** button  on the remote to skip to the previous chapter or to the end of the track being viewed. Press and hold the **Skip Backward** button to rewind the track.
7. To adjust the Volume, press the **Volume (+)** or **(-)** buttons on the unit or on the remote.
8. Press the **Mute** button  on the remote control to turn off the sound only. Press the **Mute** button again to restore the sound again.

Menu Navigation

You can access the menu system of your iPhone/iPod using the remote control.

1. To access the iPhone/iPod menu system, press the **MENU** button.
2. Use the  or  buttons to highlight the menu option you would like to operate.
3. Press the **SELECT** button to confirm and select the highlighted option.

Note:

- This feature only works when your iPhone/iPod is in Music mode.
- For iPad feature operation, please use your on-screen touch menus and options.

Repeat Play

You can repeat a single track or all the tracks on your iPad/iPhone/iPod.

Note:

- You need to use the remote control to use this function.
- This feature only works when your iPad/iPhone/iPod is in Music mode.

1. To repeat a single track, press the **REPEAT** button once. The track will be played repeatedly.
2. To repeat all the tracks, press the **REPEAT** button twice. All the tracks will be played repeatedly.
3. To cancel the repeat function, press the **REPEAT** button again.

Shuffle Play

The tracks on your iPad/iPhone/iPod can be played in a random order using the shuffle play feature.

Note:

- You need to use the remote control to use this function.
- This feature only works when your iPad/iPhone/iPod is in Music mode.

1. To turn shuffle play on, press the **SHUFFLE** button. All the tracks will be played randomly.
2. To turn shuffle play off, press the **SHUFFLE** button again.

Using the Dock

Watching Videos or YouTube Clips on your Apple Device while Docked

1. Dock your Apple device carefully and securely onto the Docking Connector.
2. Press the **Standby** button  to turn the unit on and the touch control panel will illuminate.
3. Then use your Apple device to select the video content you want to watch and press the **Play/Pause** button  on the remote or on your Apple device screen. The selected video will immediately begin to play.
4. You can choose to watch your iPad, iPhone or iPod videos in either landscape or portrait, by rotating your dock.
5. Press the **Skip Forward** button  on the remote to skip to the next chapter or to the end of the clip being viewed. Press and hold the **Skip Forward** button to fast forward through the video track.
6. Press the **Skip Backward** button  on the remote to skip to the previous chapter or to the end of the clip being viewed. Press and hold the **Skip Backward** button to rewind the video track.
7. To adjust the Volume, press the **Volume (+)** or **(-)** buttons on the unit or on the remote.
8. Press the **Mute** button  on the remote control to turn off the sound only. Press the **Mute** button again to restore the sound again.

Watching Videos on an External TV

To watch videos or YouTube clips from your iPad, iPhone or iPod on your TV you will need a RCA Composite Video Cable (not included) to connect the unit to your TV.

1. To connect your unit to your TV you will need to connect your RCA Composite Video Cable (not supplied) into the units **Video Out** jack & connect the other end of the RCA Composite Video Cable into your TVs **Video In** jack.
2. Once the unit and TV are connected, select your TV's **Video Input** source.
3. Then press the **Video** button on the remote control or the **Video On/Off** button on the back of the unit. If you were currently watching a video on your Apple device, the video will appear on screen if you have followed the above steps. During this mode the video or movie will only play on your TV, it will not simultaneously play on your Apple device.
4. Finally press the **Video** button again, to start watching videos from your Apple device screen.

Note:

- To play videos in this mode, you must press the **Video** button when an iPad, iPhone or iPod touch docked. For any other iPod models, use the **TV Out** settings on the iPod to activate or deactivate the video output function.
- The default setting for the video output is Off.

Other Functions

Switching On

1. To turn on the unit, press the  button.
2. To turn off the unit, press the  button again.

Adjusting the Volume

1. To increase the volume level, press the **VOLUME+** button.
2. To decrease the volume level, press the **VOLUME-** button.

Mute

Note: You need to use the remote control to use this function.

1. Press the  button on the remote control to turn off the sound.
2. Press the  button again to restore the sound to the previous level.

Using the Auxiliary Input (AUX IN)

This unit can be connected to a number of external devices such as a MP3 player, CD Player or non-docking iPod models using the **AUX IN** jack on the rear of the unit. This requires a 3.5mm Auxiliary Cable (not supplied).

1. Connect one end of the audio cable into the **AUX IN** jack on the rear of the unit and connect the other end of the cable into the **Line Out**, **Aux Out** or **Headphone** jack of your external audio device.
2. Press the  button to turn on the unit.
3. Turn on the external audio device and operate via the external audio device. Follow the device instructions for detailed operations.
4. Once connected the unit will begin to play through the unit speakers. You will be able to adjust the volume of the unit on the front touch panel or on the external audio device.

Note:

- If you have connected an external audio device via **Line Out** function you will only need to adjust the volume controls on front of the unit.
- If you have connected an external audio device via a **Headphone** jack you may need to adjust the volume level on both the external audio device and on the front of the unit.

Compatible iPod/iPhone/iPad Models

This unit supports the following iPod, iPhone, and iPad devices.

- iPod touch (4th and 3rd generation)
- iPod nano (6th, 5th and 4th generation)
- iPhone 4, iPhone 3GS
- iPad2, iPad

Troubleshooting

If you encounter problems when using this unit, first check the following points before requesting service. If the problem remains unsolved, we suggest you consult your retailer or service professional.

WARNING: You can contact our Service and Warranty team United Electrical on 1800 509 394.

Problem	Possible Cause	What to do
The unit does not respond (no power)	AC adaptor is not plugged into a wall outlet or the connector is not plugged into the DC Jack on the back of the unit properly.	The AC adaptor must be connected properly and the mains power must be turned on. If connected correctly, disconnect the power for 15 minutes. Reconnect and try again.
Apple device does not respond to the speaker system.	Apple device is not installed properly.	Remove your Apple device from the dock and check for obstruction on the connectors in the dock and on your Apple device. Then connect the Apple device making sure that it clicks on and is connected firmly.
	Apple device is locked up.	Please make sure that your Apple device is working properly before docking onto the unit. Please refer to your Apple device manual for information on resetting the device.
Apple device does not recharge.	Apple device is not installed properly.	Remove your Apple device from the dock and check for obstruction on the connectors in the dock and on your Apple device. Then reinsert it in the dock.
Sound is distorted.	Volume level is set too high.	Adjust the volume.
	Sound source is distorted.	If the original music file sound is poor quality it will be easily noticed on the high-power speakers. Try playing a different high quality file.
		If you are using an external sound source like older generation of iPod, try reducing the output volume on the device itself. Also try changing the EQ setting of your Apple device.
Unit gets warm after extended play at high volume.	This is normal.	Turn the unit off for a period of time or lower volume.
Unable to operate the unit from the remote control	There may be obstacles in between the unit and the signal.	Make sure there are no obstacles between the unit and the remote control. Move closer to the unit.
	The batteries may be exhausted.	Replace the batteries.

Specifications

Model Number	PAD01
Power Supply: Main Unit (AC Adaptor)	Input: 100-240V~ 50/60Hz Output: 9V === 2500mA 
Remote Control	DC 9V, 6 x AA size batteries DC 3V, 1 x CR2025 lithium battery
Power Consumption: Standby Operating	1W 32W
Frequency Response	80Hz - 16kHz, $\pm$ 3dB
Power Output	2 x 2.5W (10% THD)
Speaker	2 ^{1/2"} 8 ohms
Unit Dimensions	200 (W) x 163 (D) x 179 (H) mm
Unit Weight	1 kg

IMPORTANT: Product specifications are subject to change without prior notice.

Warranty

Please keep your receipt as proof of purchase. This product is warranted for any defect in materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only. This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alternation that affects the performance or reliability of the product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In the unlikely event that your product fails to work normally, please contact the **GRUNDIG Warranty on 1800 509 394 (Australia) or 0800 450 259 (New Zealand)** and have your receipt of purchase on hand.

This warranty is subject to the following provisions:

- It is only valid within boundaries of the country of purchase.
- The product must be correctly assembled and operated in accordance with the instructions contained in the manual.
- This product must be used solely for domestic purposes.
- The warranty does not cover accidental damage.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexperienced repair.
- The manufacturer disclaims any liability for incidental or consequential damaged.

This warranty is in addition to, and does not diminish, your statutory or legal rights.

PO BOX 6287
Silverwater NSW 1811
www.grundig.net.au

GRUNDIG Warranty: 1800 509 394 Australia
GRUNDIG Warranty: 0800 450 259 New Zealand

