


PR-6014
Size : 180 (W) x 190(H)mm
Material : Art Paper

**2-Band
Digital Pocket Radio**

PR6014

GRUNDIG

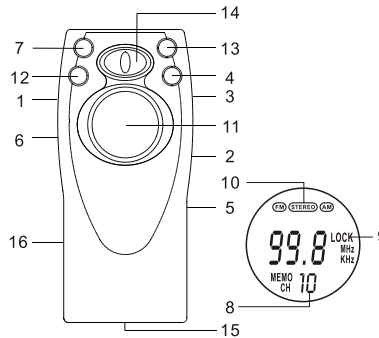

CONTROLS AND FUNCTIONS

1. Earphones jack
2. Power ON/OFF
3. VOLUME control
4. AM/FM Band button
5. Bass Boost selector
6. LOCK Switch
7. Tuner UP/ Hour button
8. PRESET indicator
9. Key Lock indicator
10. FM Stereo indicator
11. LCD display
12. Tune DN/Minute button
13. Memory/Time set button
14. Presets UP/DN button
15. Battery compartment
16. Belt Holder

BATTERIES

1. Open battery cover on the rear.
 2. Insert two 1.5V AAA batteries as indicated in the compartment.
 3. Replace battery cover.
- Note: Check your batteries regularly.

Old or discharged batteries must be replaced to avoid acid leaking that may damage your unit. To avoid memory deleting, change the batteries within 30 seconds. If the unit is not to be used for a long time, remove the batteries from their compartment.

GENERAL OPERATIONS

RADIO OPERATION

1. Select POWER ON (2).
2. Adjust the volume by turning the VOLUME control (3) clockwise.
3. Press the AM/FM Band button (4) to the desired radio band. The selected radio band appears on the display.
Note: The earphone wire acts like an FM antenna. Plug the wire into the relevant jack (1) for better FM reception.
- To optimize AM reception by turning horizontally the radio until reaching the best reception position.
4. Press the Tuning UP/DOWN buttons (7, 12) to search for the desired station with manual tuning.
5. For automatic tuning hold the UP

(HR) or DOWN (MIN) buttons pressed for more than two seconds.
Press same button again to stop automatic tuning.
Note: Stereo is possible only in FM.

MEMORY PRESET

You can store 20 preferred stations in your PR6014 memory (10x FM, 10x AM).

1. Tune the radio to the desired frequency.
2. Press the MEM button (13).
3. Select the desired Preset position by pressing MEM DN/UP (14), then press MEM again (13) to store the desired radio station.

MEMORY RECALL

Select the desired band (4) and press MEM DN/UP (14) until you find the desired station.

BASS BOOST

Set the BASS BOOST switch (5) to "ON" position to enjoy a more powerful Bass sound.

TIME ADJUSTMENT

The time is visible when the radio is set to OFF. Press the TIME SET Button (13), then adjust time with the HOUR and MIN Buttons. Press the TIME SET Button (13) again.
The Clock is 24-hour mode.

LOCK SWITCH

This radio is equipped with a lock switch to disable your keypad. Push the LOCK Switch (6) to "ON".
"LOCK" appears in the Display.

Technical Data



Power supply
2 x 1.5V DC batteries "AAA" size
Frequency range
AM 522 - 1620 kHz
FM 87.5 - 108 MHz
Dimensions
45 x 97 x 22mm
Accessories:
- Stereo Dynamic Earphones
- Detachable belt clip
- 2x1.5V DC Batteries "AAA" size included

<http://www.grundig.net.au>