

PERSONAL RADIO

Model No: PR6020

English


Grundig Helpline: 1800 509 394 Australia
Grundig Helpline: 0800 450 259 New Zealand

GRUNDIG

Introduction


Thank you for purchasing this digital FM auto scan radio!
Please follow these instructions carefully to ensure your product operates correctly.

ILLUSTRATION

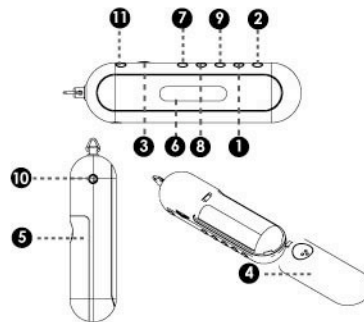

- | | |
|------------------------------|----------------------|
| 1) Reset button | 7) Time set button |
| 2) Scan button | 8) Hour set button |
| 3) Volume control/Radio Off | 9) Minute set button |
| 4) Battery compartment cover | 10) Earphone jack |
| 5) Battery compartment | 11) Backlight button |
| 6) LCD Display | |

 DISPLAY DETAILS



CONNECTION

Using battery power

This radio operates on two UM-4/AAA size. Push the battery compartment cover (4) outward to open. Insert two batteries in the battery compartment following the polarity diagram on the battery compartment. Replace the cover by sliding it back until it clicks into place. Remove the batteries if the unit is not to be used for a long period of time. This prevents any damage from leaking batteries.

SETTING THE CLOCK

Setting The Time

Press and hold the Time Set button (7). Press the Hour Set button (8) or the Minute Set button (9) to set the clock display to the right. Release the Time Set button. (7)

BACKLIGHT

Press Backlight button (11) to turn on the backlight. The backlight delays for approx. 20 secs.

LISTENING TO THE RADIO

Turn on the radio by turning anti-clockwise the Volume Control. (3). Press Scan button (2) once, the radio will automatically seek the radio station, also capture it. The display will show the radio frequency you are tuning to. To find your desired station, press Scan button (2) again to seek next station. To revert to the previous station Position (108 MHz), press Reset Button (1). To reset the receiver to the low-end (i.e. Fm 88 MHz). Then select your desired station again by pressing Scan button. (2)

Turn the Volume Control (3) to a comfortable listening level. Turn down the unit, by tuning the Volume Control (3) until clicks.

MAINTENANCE

Keep the unit away from heat or heater. Do not expose the unit directly under the sunlight. Keep the unit away from high humidity. Keep away from rain and water which could cause damage to the unit.

IMPORTANT

Weak batteries could cause weak reception, low sound output and distortion. When the unit is not in use for a considerable period, remove the batteries from the unit to prevent leakage which could cause damage to the unit.

SPECIFICATION

FM Frequency : 88-108MHz
Earphone: 32 ohm stereo
Power Supply: DC3V
Dimensions: 60mm (W) X 68mm (H) X 25mm (D)
Weight: 40 Grams (Excluded Battery)

GUARANTEE

Please keep your receipt as proof of purchase. This product is warranted for any defect in materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only. This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alteration that affects the performance or reliability of the product. If guarantee is required please contact the **GRUNDIG Helpline 1800 509 394 within Australia or the 0800 450 259 within New Zealand.** Have your receipt of purchase on hand.

This guarantee is subject to the following provisions:

- It is only valid within boundaries of the country of purchase;
- The product must be correctly assembled and operated in accordance with the instructions contained in this manual;
- This product must be used solely for domestic purposes;
- The guarantee does not cover accidental damage;
- The guarantee will be rendered invalid if the product is resold or has been damaged by inexperienced repair;
- The manufacturer disclaims any liability for incidental or consequential damages.

This guarantee is in addition to, and does not diminish, your statutory or legal rights.

PO BOX 6287
SILVERWATER NSW 1811
www.grundig.net.au

Grundig Helpline: 1800 509 394 Australia
Grundig Helpline: 0800 450 259 New Zealand