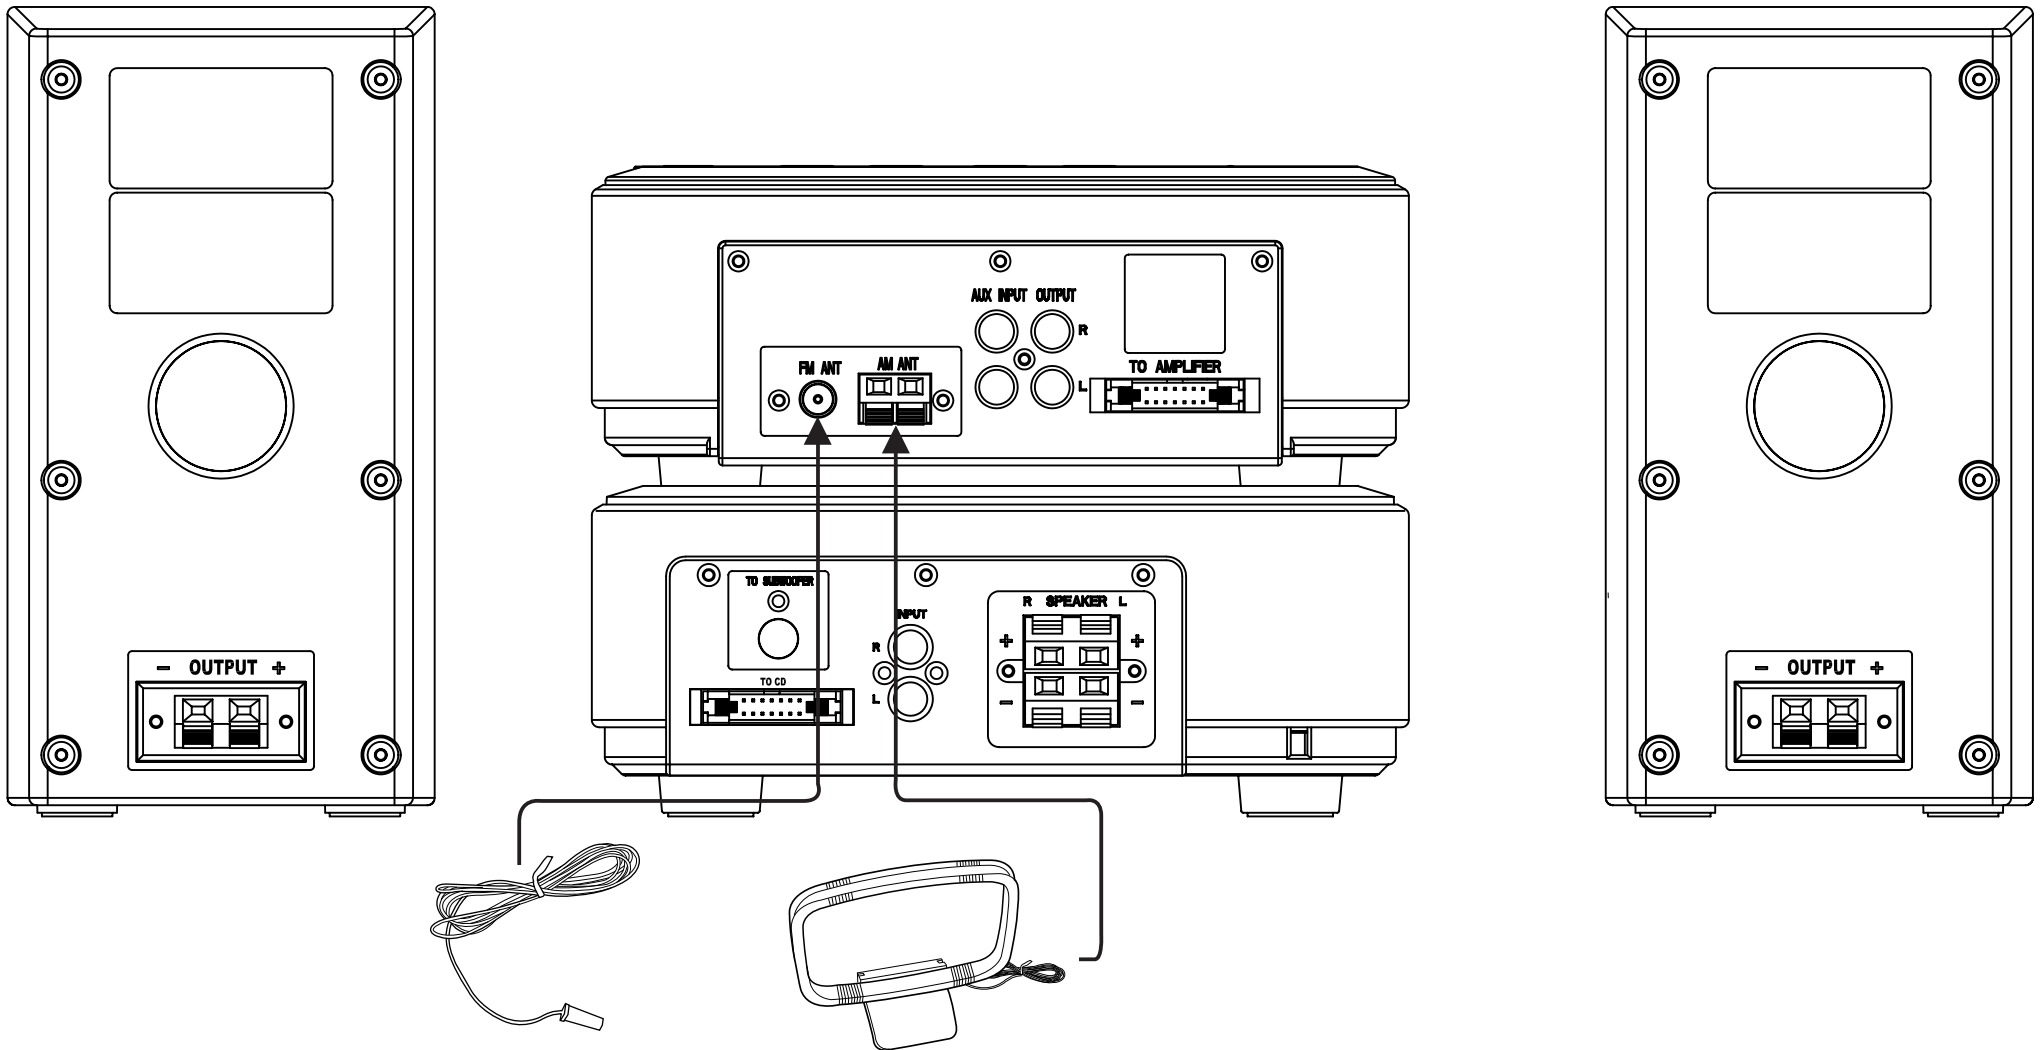 


CONNECTION AND PREPARATION FOR GRUNDIG UMS555




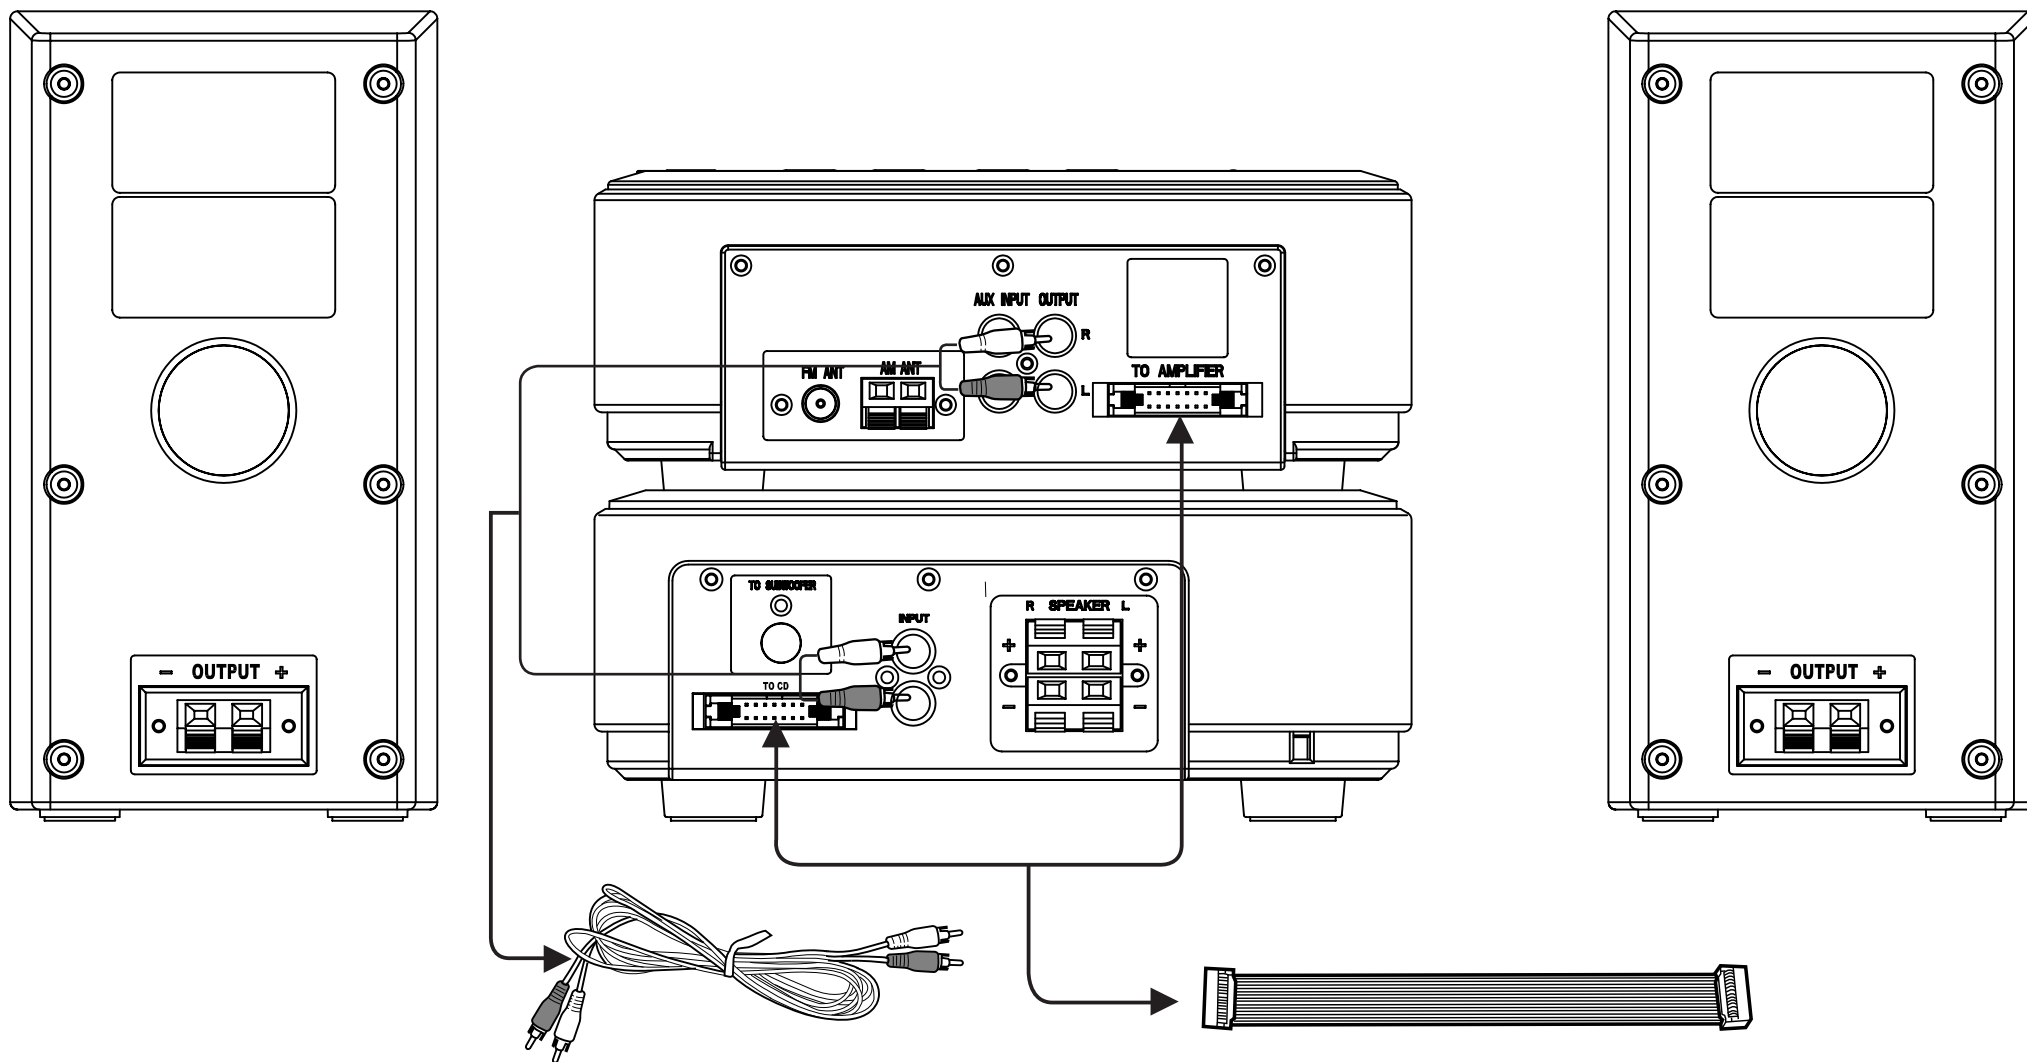


Fig. 2

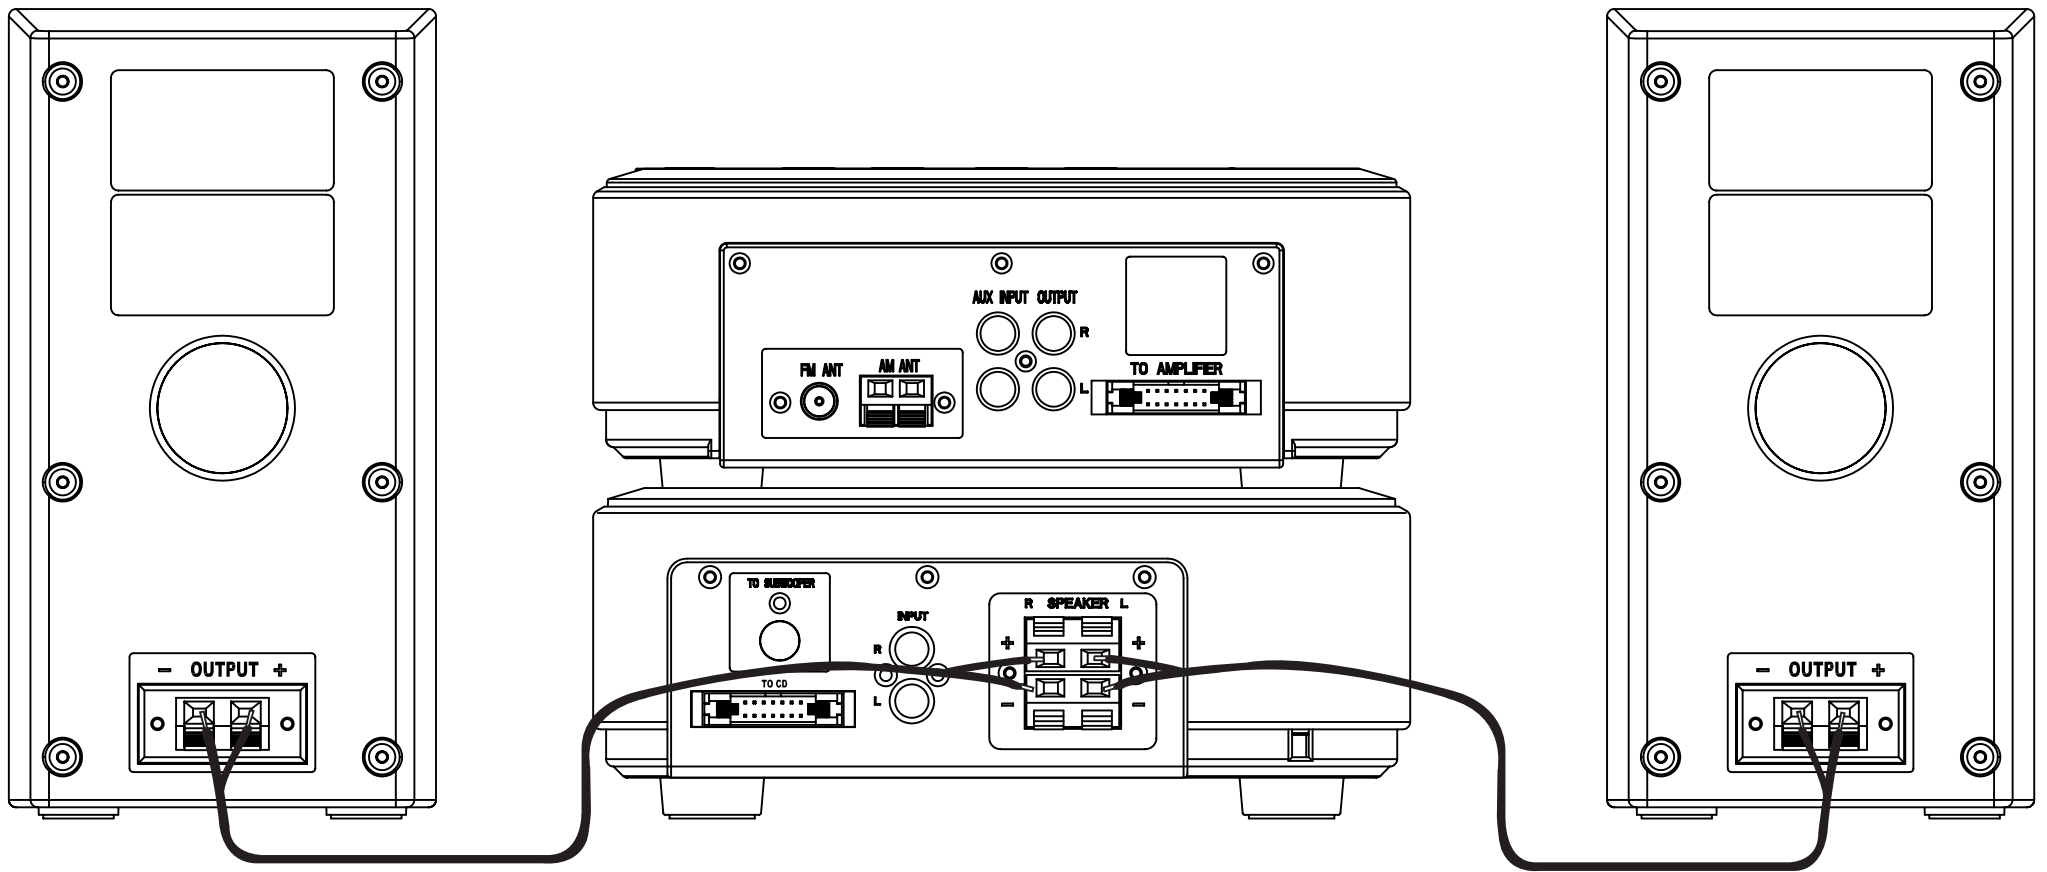

CONNECTION AND PREPARATION

Connecting the antennas

The wire antenna provides adequate reception of local FM (VHF) regional stations. Do not shorten the wire antenna. A frame antenna is available for the reception of MW (medium wave) stations.

- * Plug the wire frame antenna into the »**AM ANT**« socket on the hi-fi system. Adjust the position of the wire frame antenna until you get the best reception.

Connecting the loudspeakers

- * Plug the loudspeaker cables into the »**SPEAKERS + R – – L +**« terminals on the hi-fi system.
Connect the cables marked in red to the red terminal.

Connecting the headphones

- * Insert the headphone plug (ø 3.5 mm) into the »« socket on the left side of the hi-fi.
– The loudspeakers of the hi-fi system are switched off.

Connecting the power cord

Note:

Check that the mains voltage on the type plate (on the bottom of the hi-fi system) corresponds to your local mains supply.

The only way to disconnect the hi-fi system from the mains supply is to pull the plug.

- * Plug the power cord into the wall socket.

Connecting the RCA cable

- * Plug the RCA cables into the »Output & Input« terminals on the hi-fi system as Fig. 2 shown.□
Connect the cables marked in red to the red terminal.