

Remote Control Operation

Button	Description
	Switches the PVR or TV (when programmed) between on and standby
	Selects TV mode for button commands (once programmed)
	Selects PVR mode for button commands
	Displays current program information
	Accesses the Freeview Electronic Program Guide. (Press RED to Record when in the EPG)
	Opens the Library to access recordings.
	Swaps between library and scheduled recordings in library mode and returns to the last viewed channel in TV mode.
	Increases volume
	Decreases volume
	Navigates up through programs
	Navigates down through programs
	Navigates up
	Navigates left
	Confirms selection
	Navigates right
	Navigates down
	Silences or resumes audio
	Instant Recording - Press multiple times to navigate through time options (30 – 180 minutes).
	Navigates through the set channel favourites
	Opens the main menu
	Changes between 16:9 and 4:3 picture viewing
	Returns to the previous menu
	Exits the Screen being viewed
	Rewind live television or the recorded program
	Plays or Pauses a recorded program or live TV
	Fast Forward a recorded program or TV in time shift
	Skips backwards 10 minutes.
	Stops playback of the current recording
	Skips forward 10 minutes
	For Interactive Use and menu navigation. The red button is used to record the program highlighted in the EPG
	Used for number input
	Displays teletext if broadcast
	Displays subtitles if broadcast



Programming your Learning Remote Control

Congratulations on your new Bush Freeview PVR!

You may notice that your remote control does not match the remote control outlined in the instruction manual.

This is because you are one of the first recipients of our new and improved learning remote control which offers additional functionality, and is able to be programmed to control the basic functions of your TV.

When you have fully programmed your remote control, the following buttons are capable of controlling your TV - , ,  and . You have two options for programming your remote control – via the search facility and via the four digit codes which may be found online.

Programming the Remote Control using the Search Facility

1. Make sure that you are pointing the remote control at the TV and not at your PVR.
2. Press the  button on the remote control. The  button should blink once after this is pressed.
3. Press and hold both the  button and the  (red) button at the same time until the  button flashes twice. Release the buttons.
4. Press and release 9, then 9 again, then 1. The  button will flash twice.
5. Press the  button once and release it. The remote control will begin searching for the TV code. Please wait, this may take a few minutes.
6. Once your TV turns off, press the  button.
7. The  button will then flash twice to advise that the TV code has been stored in the remote control.

Programming the Remote Control using the Four Digit Code

The second option for programming your learning remote control is via the relevant four digit code that corresponds with your brand of TV. Find the PVR Remote Code document located at www.bushaustralia.com.au/productcode.pdf. Locate the four digit codes for your relevant brand of TV in this document and keep it to hand to program the remote control via the process outline below. Alternatively, scan the QR code at the bottom of the page to be directed to the remote codes document.

If there is no code for your TV, or the supplied codes fail to work, please refer to the 'Programming the Remote Control using the Search Facility' section above.

1. Make sure that you are pointing the remote control at the TV and not at your PVR.
2. Press the  button on the remote control. The  button should blink once after this is pressed.
3. Press and hold both the  button and the  (red) button at the same time until the  button flashes twice. Release the buttons.
4. Press and release the relevant numbers listed in the codes document in sequence. Once the four relevant numbers are entered the  button will flash twice. If the  button only flashes once, then an invalid code has been entered.
5. To check if the code has worked press the  button. If the TV does not turn off then you will need to repeat this process and try another code.
6. If none of the codes work, try using the search facility outlined above.

Please note that your PVR remote control will remember the programmed code even if you replace the batteries.



SCAN ME USING A QR CODE READER TO ACCESS THE TV FOUR DIGIT CODE DOCUMENT